


CONTENTS

ENGINE	1
GENERAL	1
TRANSMISSION LUBRICATION	2
COOLING SYSTEM	3
ENGINE ASSEMBLY	4
FIRING ORDER	5
CYLINDER HEAD/GASKET	6
MAGNETO/CLUTCH REMOVAL	7
BALANCER INSTALLATION	10
CRANKCASE/TRANSMISSION	11
AIR FILTER	14
CARBURETOR	14
YPVS	17
AUTOLUBE PUMP	19
CHASSIS	23
TIRE	23
FRAME	24
FRONT FORK	24
ANTI DIVE SYSTEM	25
FRONT BRAKE	26
REAR BRAKE	27
REAR SHOCK	28
ELECTRICAL	30
BASIC CIRCUIT	30
IGNITION TIMING	31
IGNITION CIRCUIT	31
CHARGING CIRCUIT	32
YPVS CIRCUIT	32
OIL LEVEL INDICATOR	34
FLASHER CANCELLING SYSTEM	34
TROUBLE SHOOTING	35
COOLING SYSTEM	36
HEAD LIGHT	37

ENGINE


GENERAL

LIQUID-COOLED 2-STROKE, 50° V-4 ENGINE WITH PISTON REED VALVE AND CRANK REED VALVE INDUCTION.

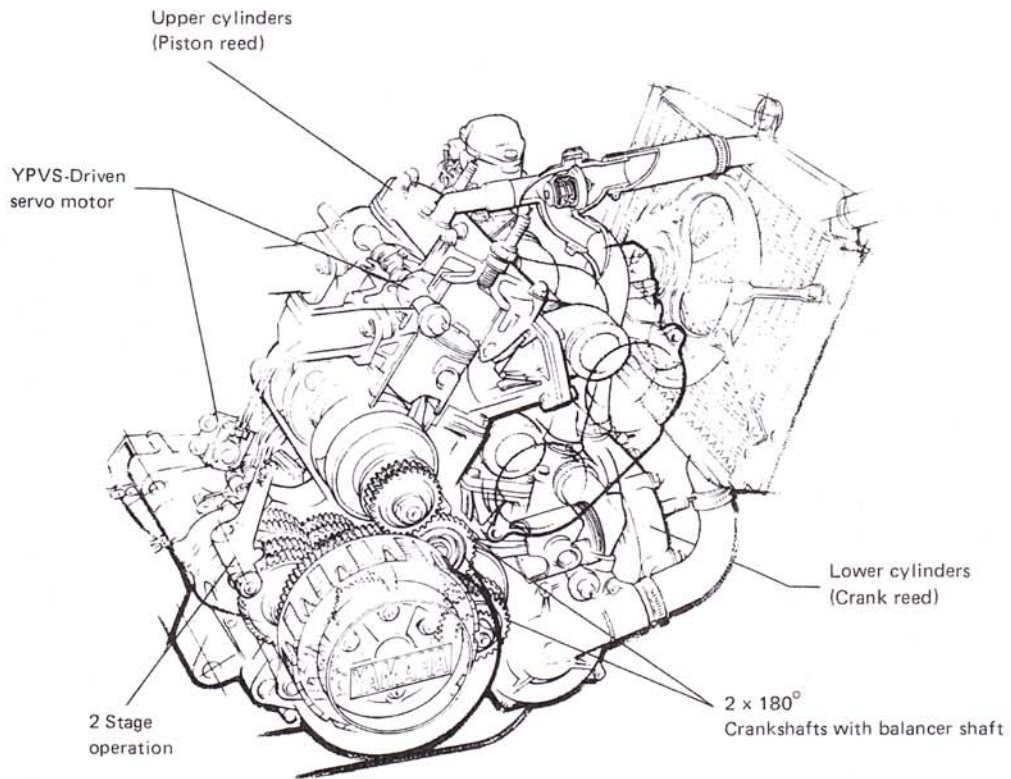


— MEMO —

TRANSMISSION LUBRICATION

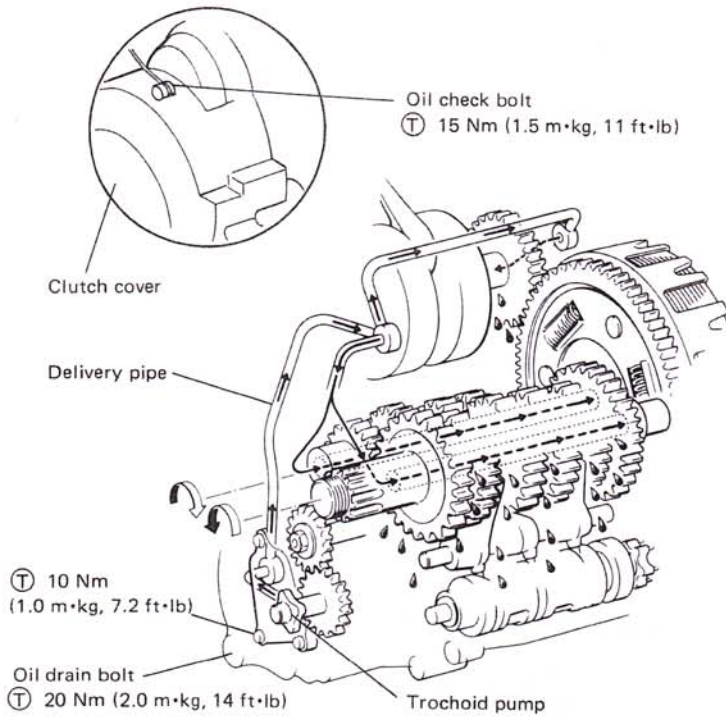


RECOMMENDED OIL: SAE 10W/30 "SE" MOTOR OIL
OIL QUANTITY: Total: 1.6ℓ Periodic: 1.5ℓ

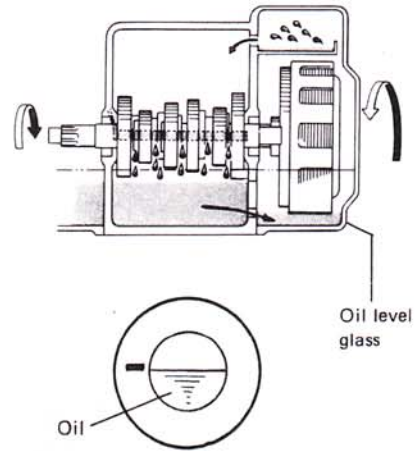

OIL FLOW CHART

* Be sure to check the oil flows after slightly loosend the oil check bolt.

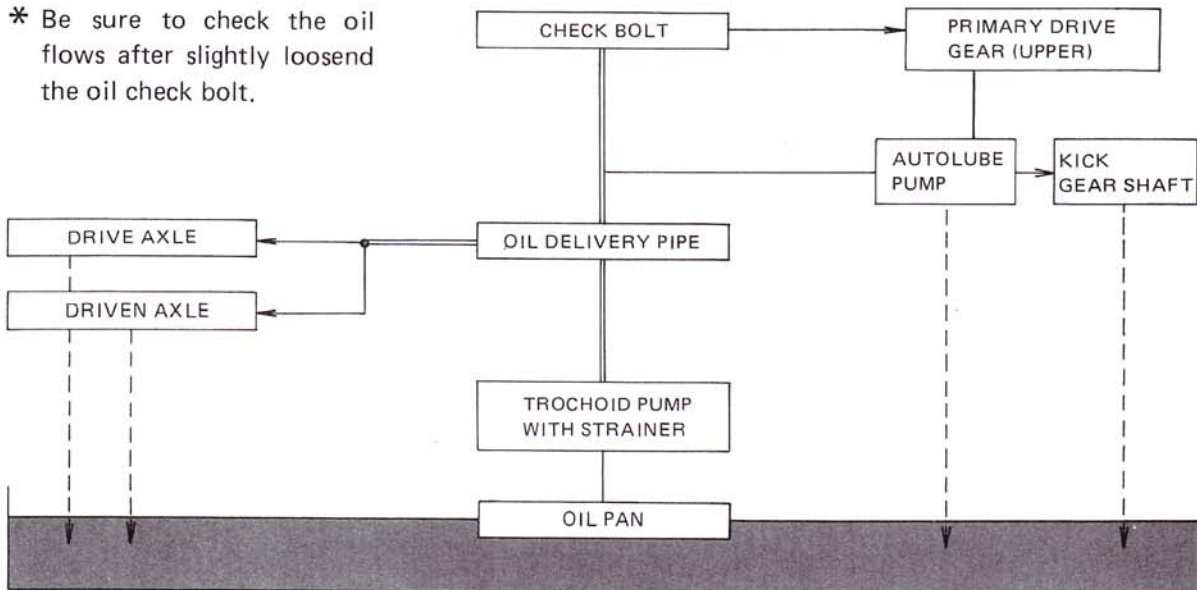

Checking the transmission oil level
 Pay attention to check the oil level, since both the semi-dry and the wet sump lubrication systems are used in combination.

- Start the engine, and after three minutes or so, stop it. If the oil level rises gradually up to the specified level, oil level is correct.


(The oil flows from transmission case to the clutch case.)

WARNING:

When replacing the transmission oil, oil amount should be measured.

COOLING SYSTEM (FLOW OF COOLANT)

Coolant capacity: Radiator: 1.95ℓ Recovery: 0.35ℓ
Recommended coolant: High quality ethylene glycol anti-freeze containing anti-corrosion for aluminum engine inhibitors
Coolant and water mixed ratio: 50% : 50%



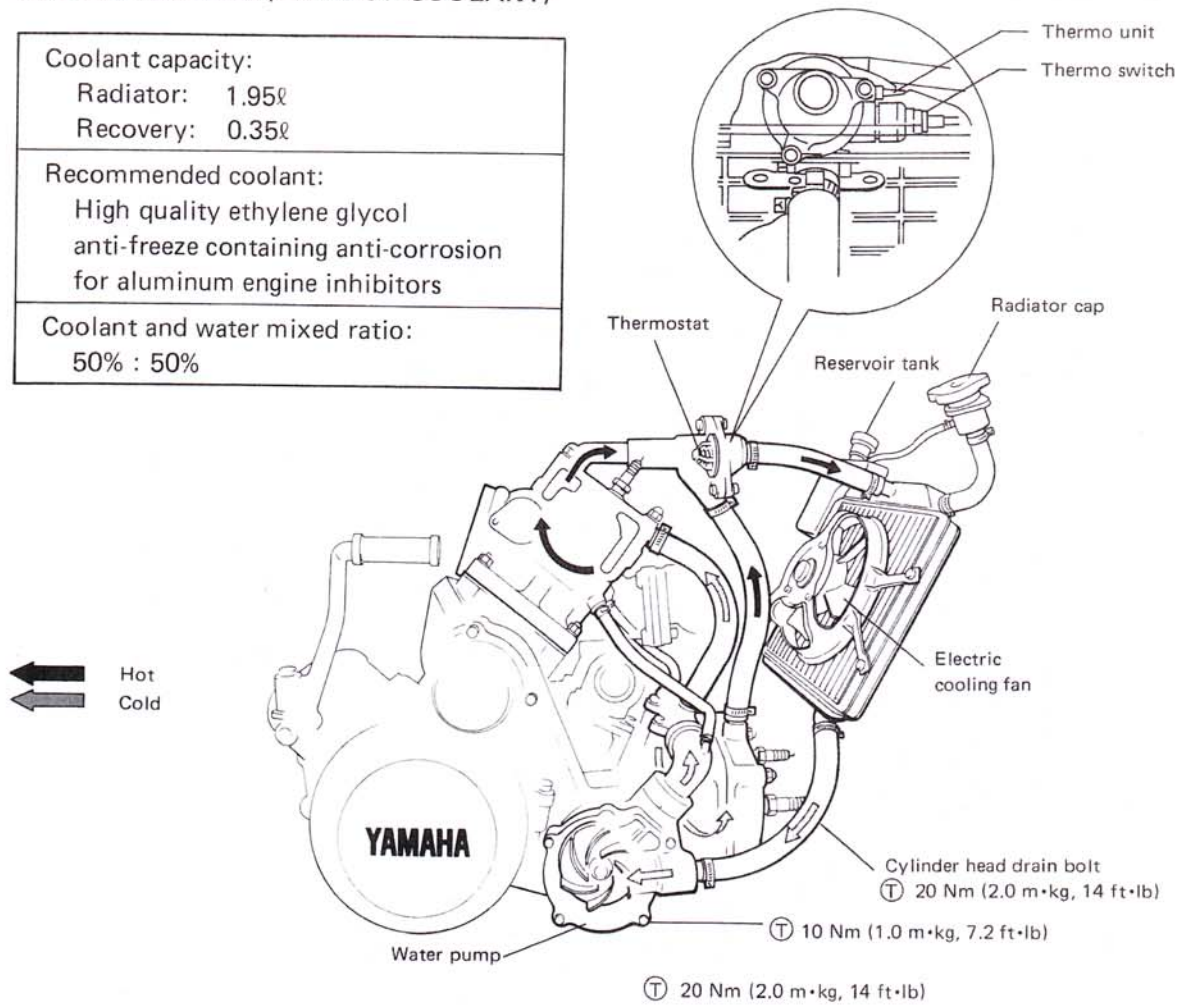


COOLANT FLOW:


When the coolant temperature rises to more than 65°C, the thermostatic valve is opened, thus allowing the coolant to flow.

When the coolant temperature is over the 105°C, the thermostitch is turned on, and the electric cooling fan operates, thus increasing cooling efficiency.

THERMOSTAT

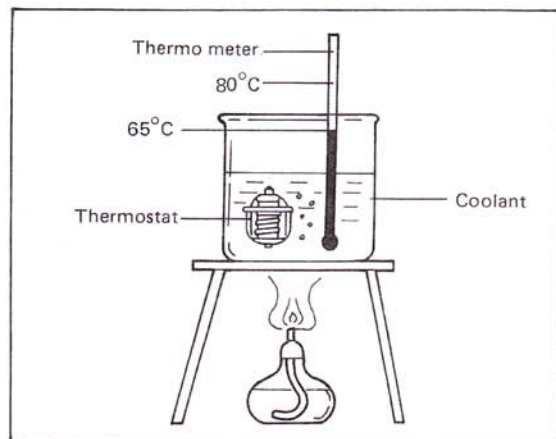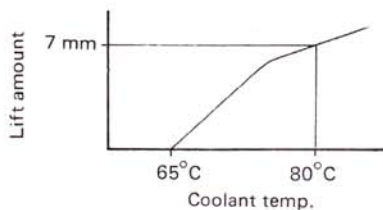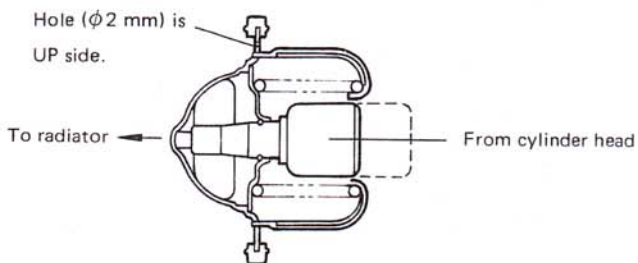

ENGINE ASSEMBLY

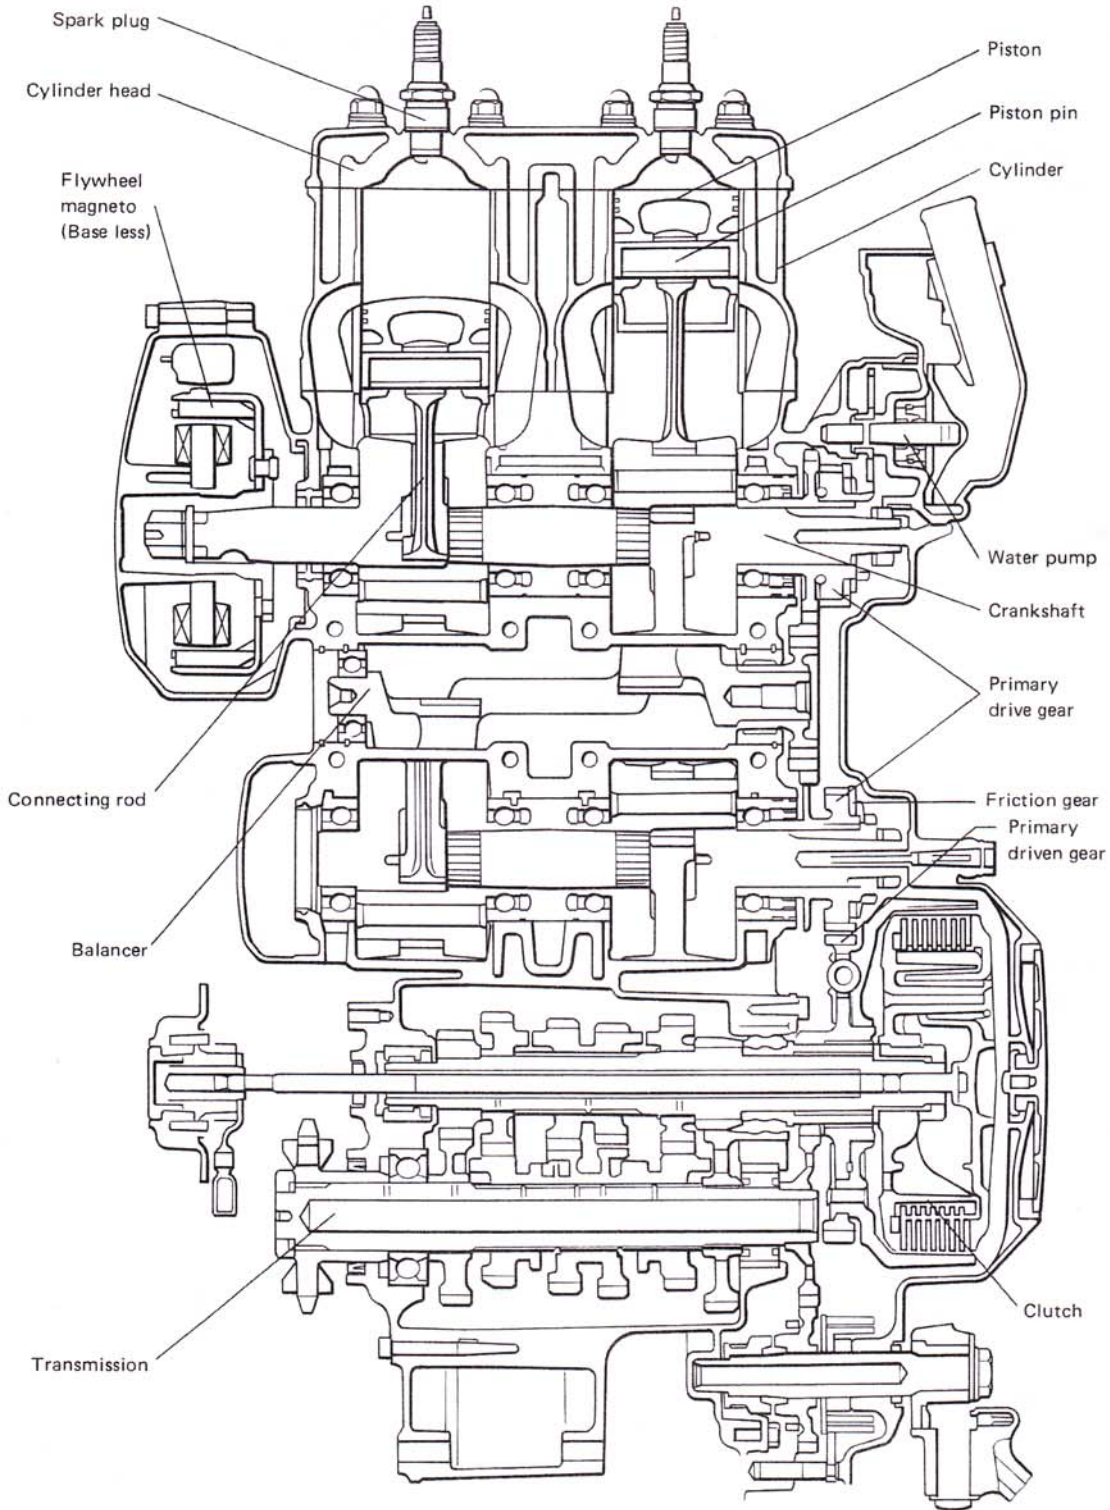

FIRING ORDER



ENGINE DISPLACEMENT:
499 cm³

BORE x STROKE
56.4 x 50.0 mm
(2.22 x 1.97 in)

SPARK PLUG:
BR9HS (NGK)
W27 FSR (N.D.)

PLUG GAP:
0.6 ~ 0.7 mm
(0.025 ~ 0.027 in)




Ⓣ 20 Nm (2.0 m·kg, 21 ft·lb)

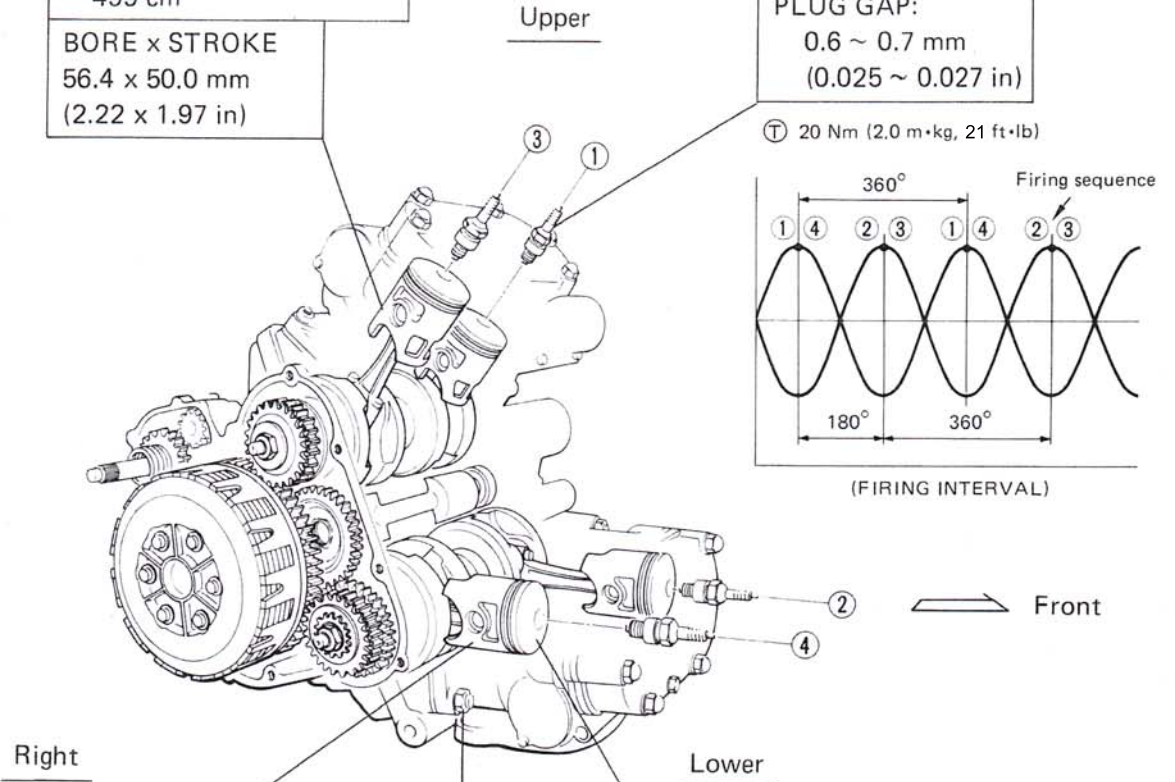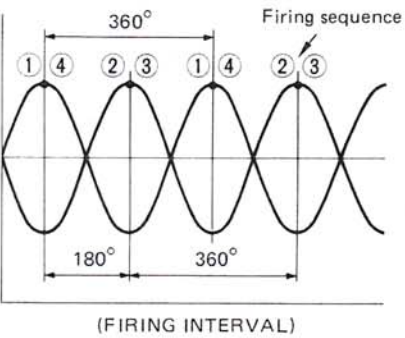

Ⓣ 30 Nm (3.0 m·kg, 14 ft·lb)


Piston

Piston ring

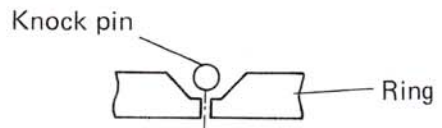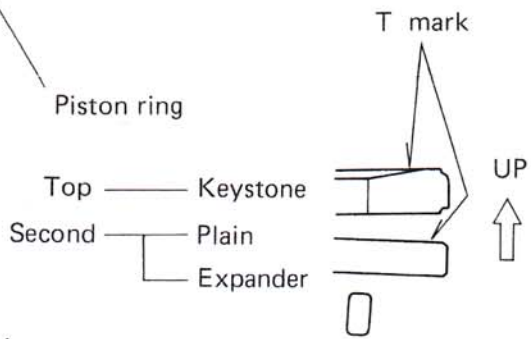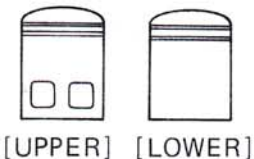


Engine Numbering:
The upper left is #1, lower left is #2, upper right is #3, and lower right is #4.
Disassembly begin with lower cylinder (#2, 4).

CYLINDER HEAD AND GASKET

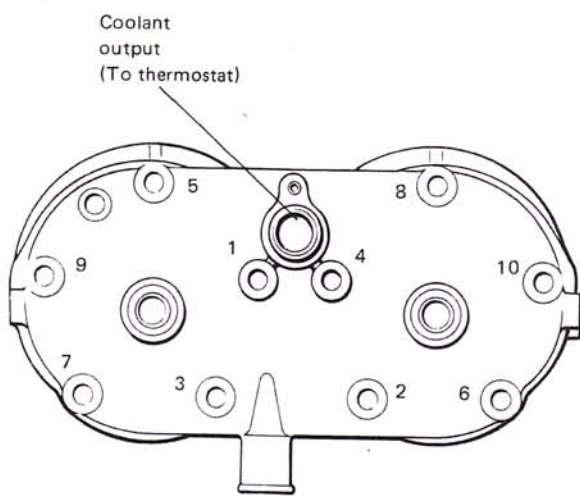


UPPER HEAD (#1, 3)

- No. 1, 4, 9, 10 → COPPER WASHER/CROWN NUT
- No. 2, 3 → THERMOSTAT STAY
- OTHERS → PLATE WASHER

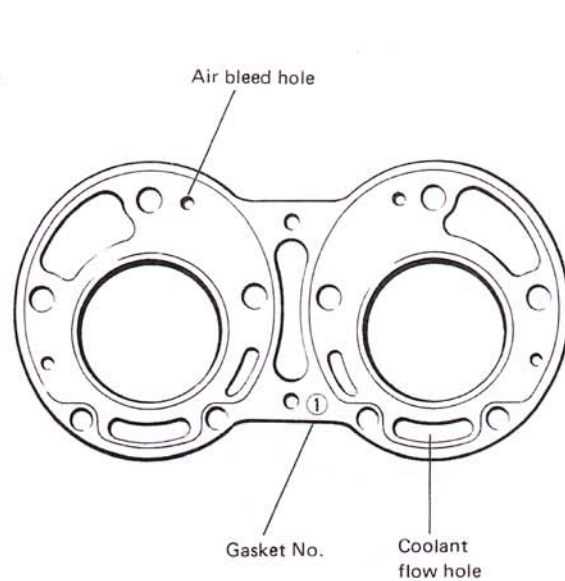


* White stamped number on gasket should be faced to cylinder head.

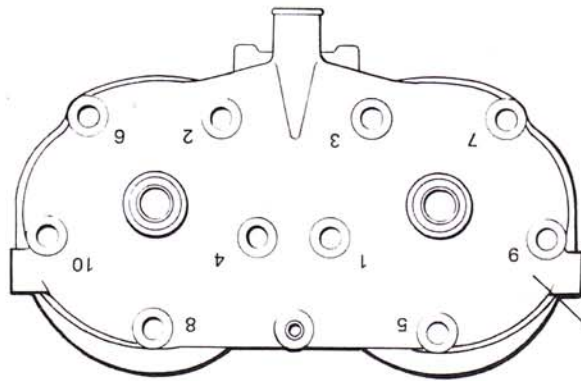

LOWER HEAD (#2, 4)


- No. 1, 4, 9, 10 → COPPER WASHER/CROWN NUT
- OTHERS → PLATE WASHER

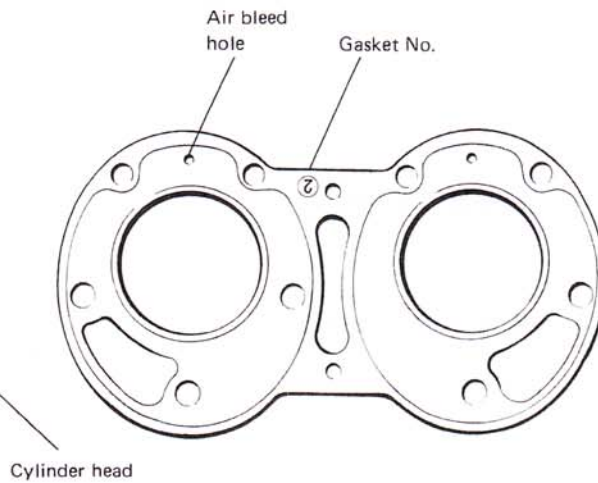


TIGHTENING SEQUENCE:
 REMOVE – Starting with highest No. (10)
 TORQUE – Starting with lowest No. (1)

TIGHTENING TORQUE:
 25 Nm (2.5 m·kg, 18 ft·lb)


MAGNETO REMOVAL

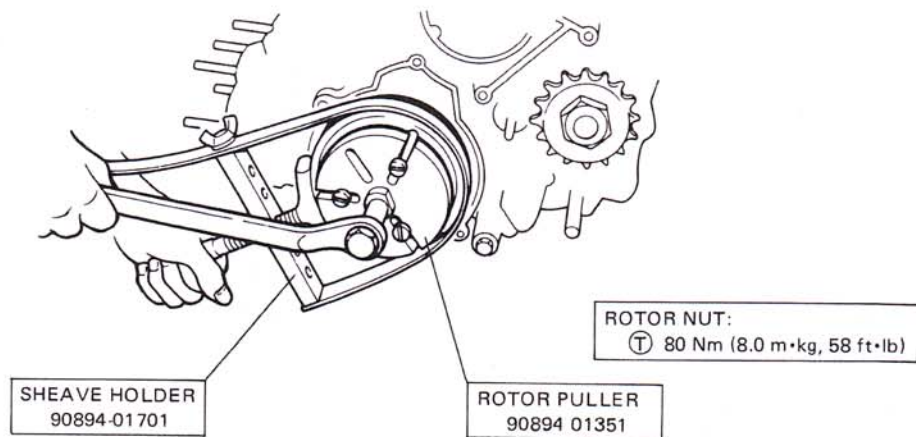

CLUTCH REMOVAL

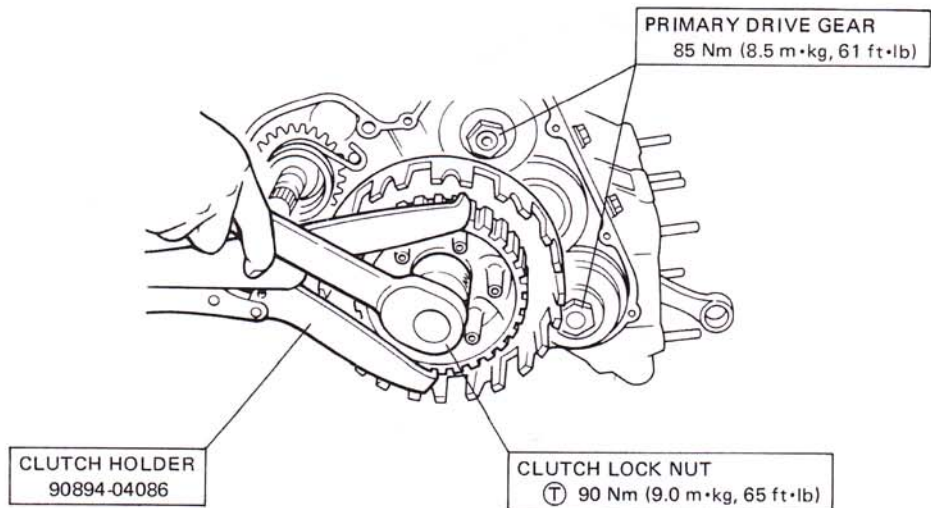

Water pump
drive gear

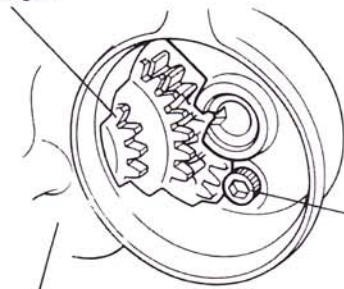


Ⓣ 10 Nm (1.0 m•kg, 7.2 ft•lb)


- When installing water pump assembly, bring gears of drive and driven to align.
- When remove clutch case cover, first remove water pamp assembly.

* Do not forget to remove this screw when clutch case cover is removed.


CLUTCH INSTALLATION

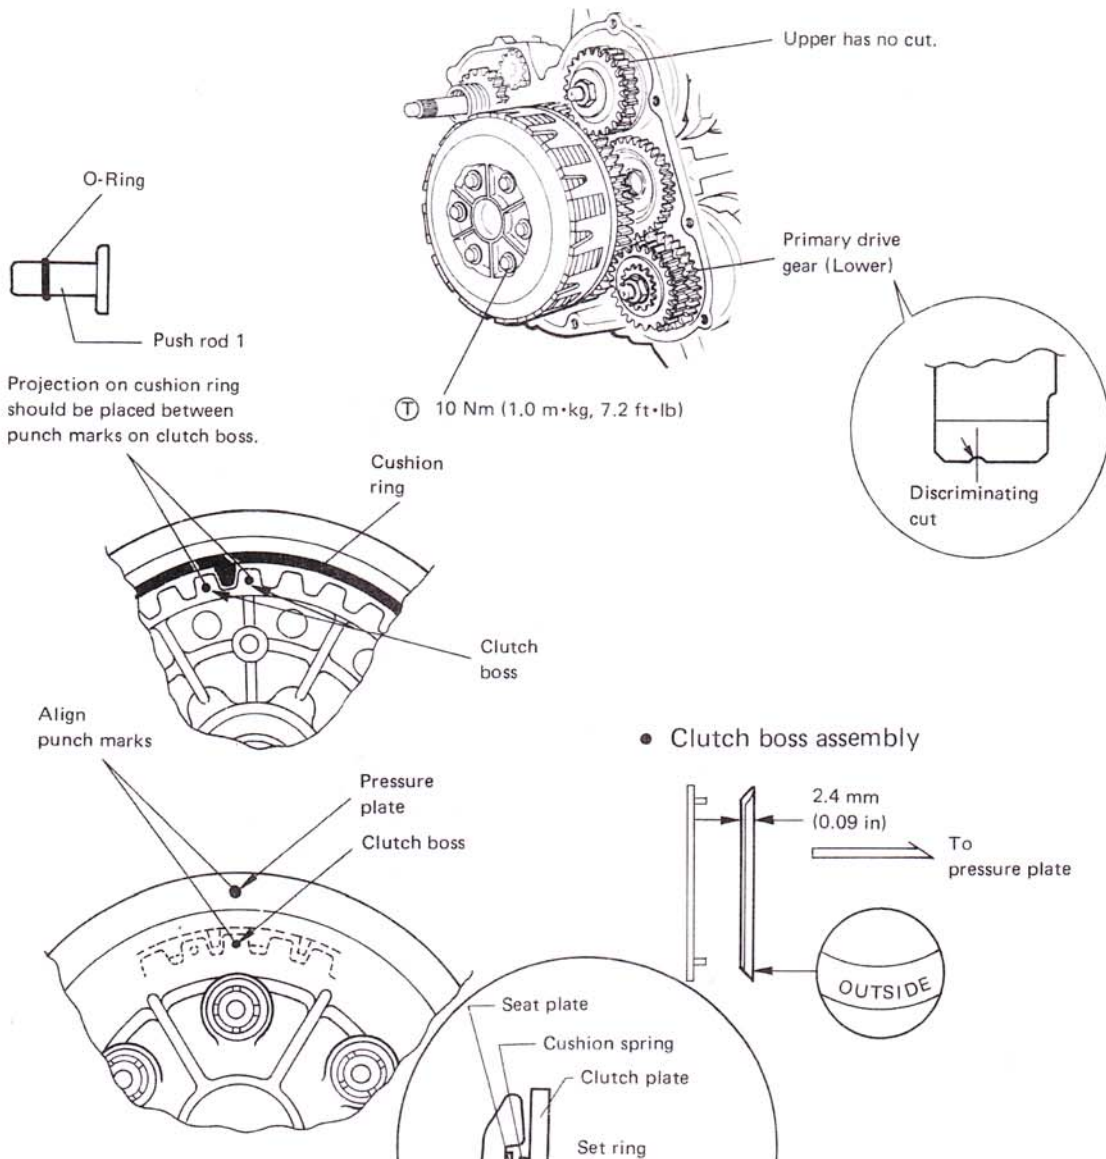


KICK STARTER INSTALLATION

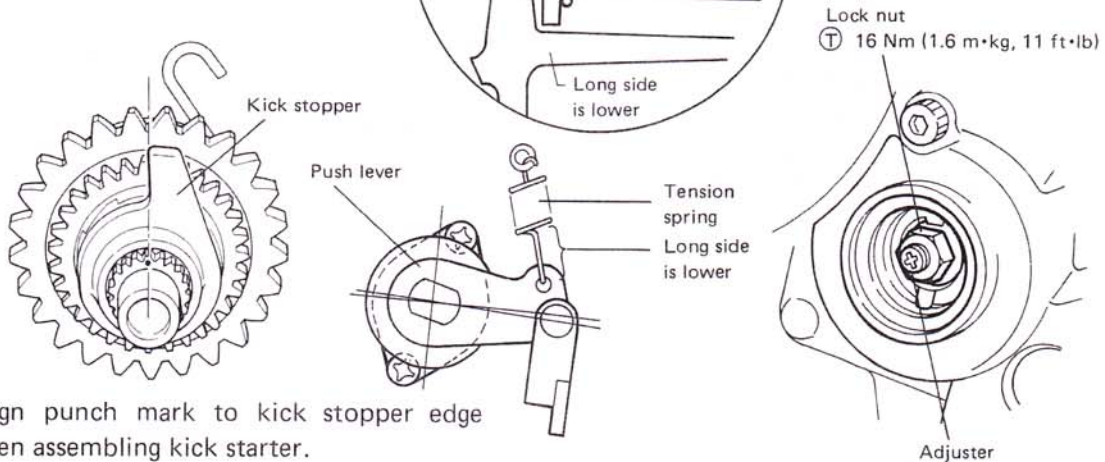

PRIMARY DRIVE/DRIVEN
GEARS INSTALLATION

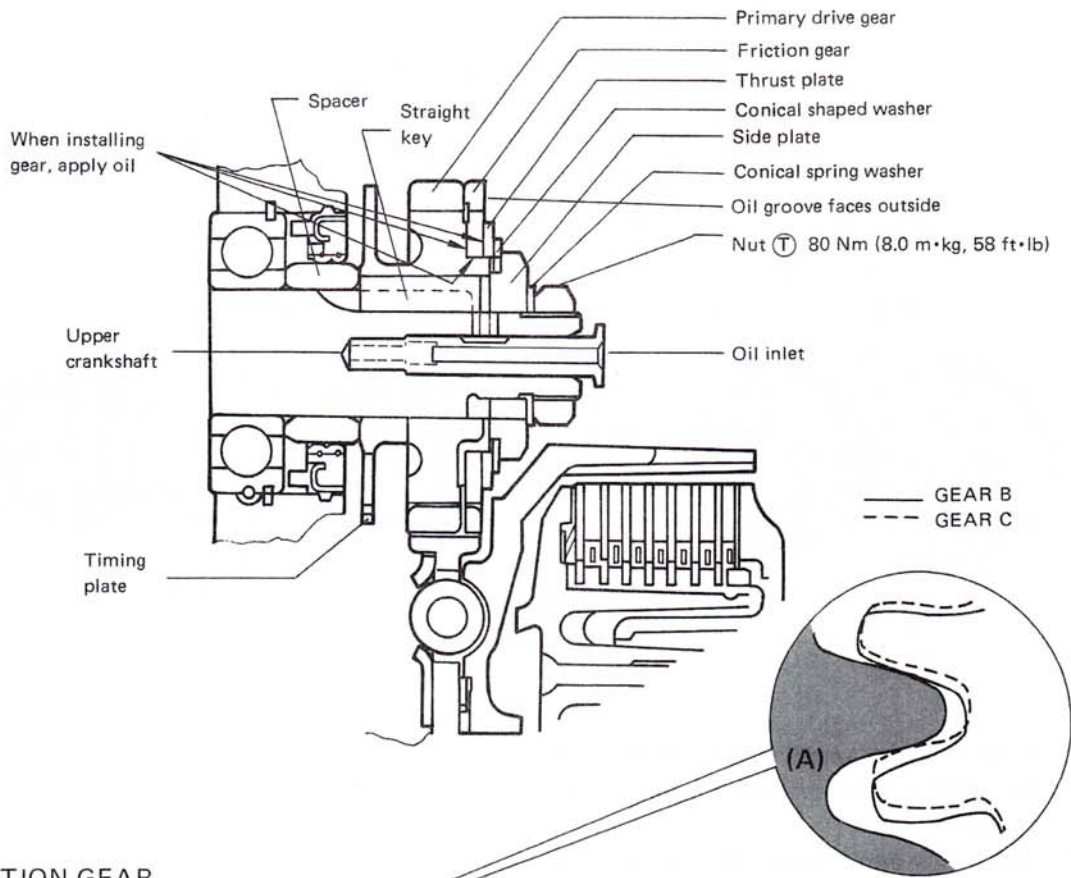


FRICION GEAR

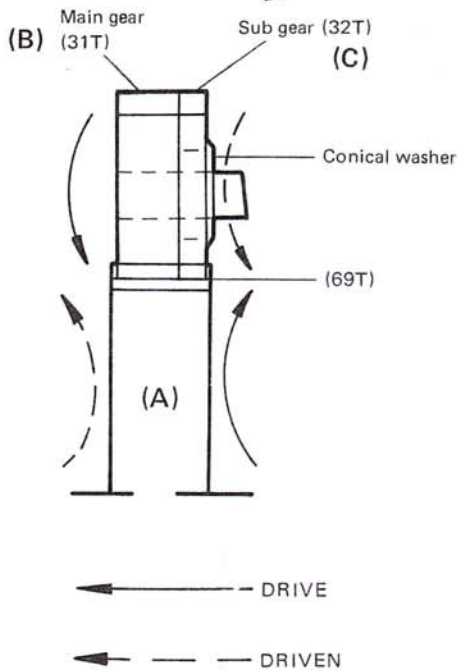


1. The primary drive gear consists of 2 gears on the crankshaft, the teeth number of each gear differing by one tooth.
2. Sub gear (Friction gear) C is free against the main gear B, but hold against it by friction of the conical washer.
3. Gear (A) is driven by gear (B) and gear (C) is driven by gear (A). However power is not actually transmitted between gears (A) and (C).
4. Therefore there is zero back lash between gears B, A and C.

BALANCER INSTALLATION



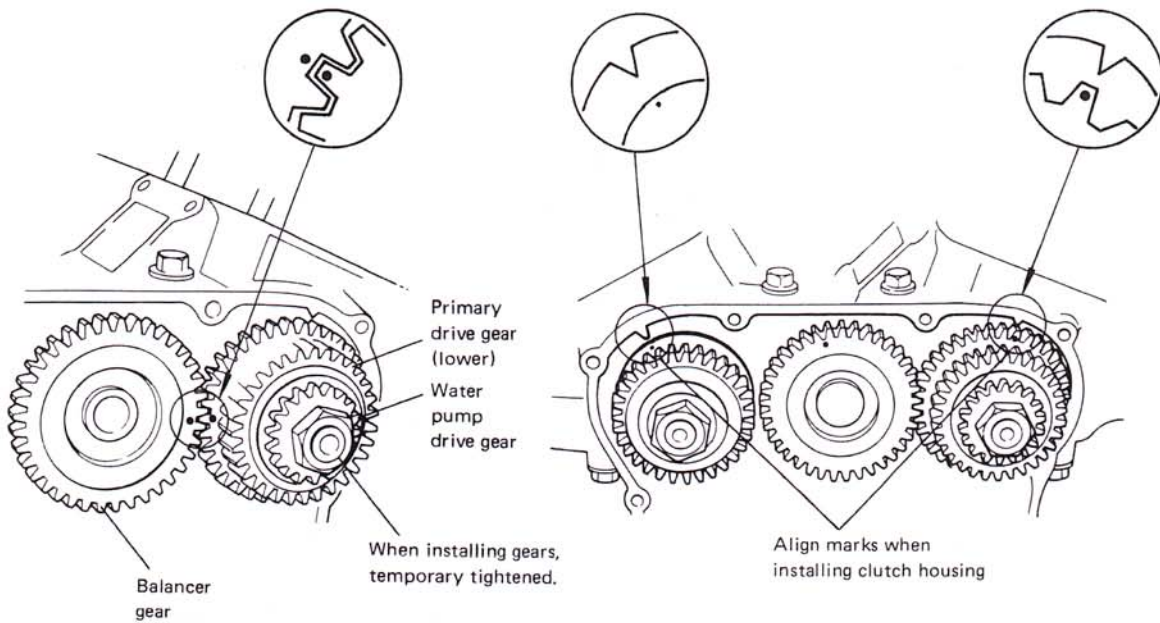


1. Align the marks on the balancer gear and the primary drive gear of the lower cylinder.
2. Align the each marks of the primary drive gear with the mark on the crankcase.
3. While make sure the marks are in alignment, install the clutch housing.

CRANKCASE SEPARATION

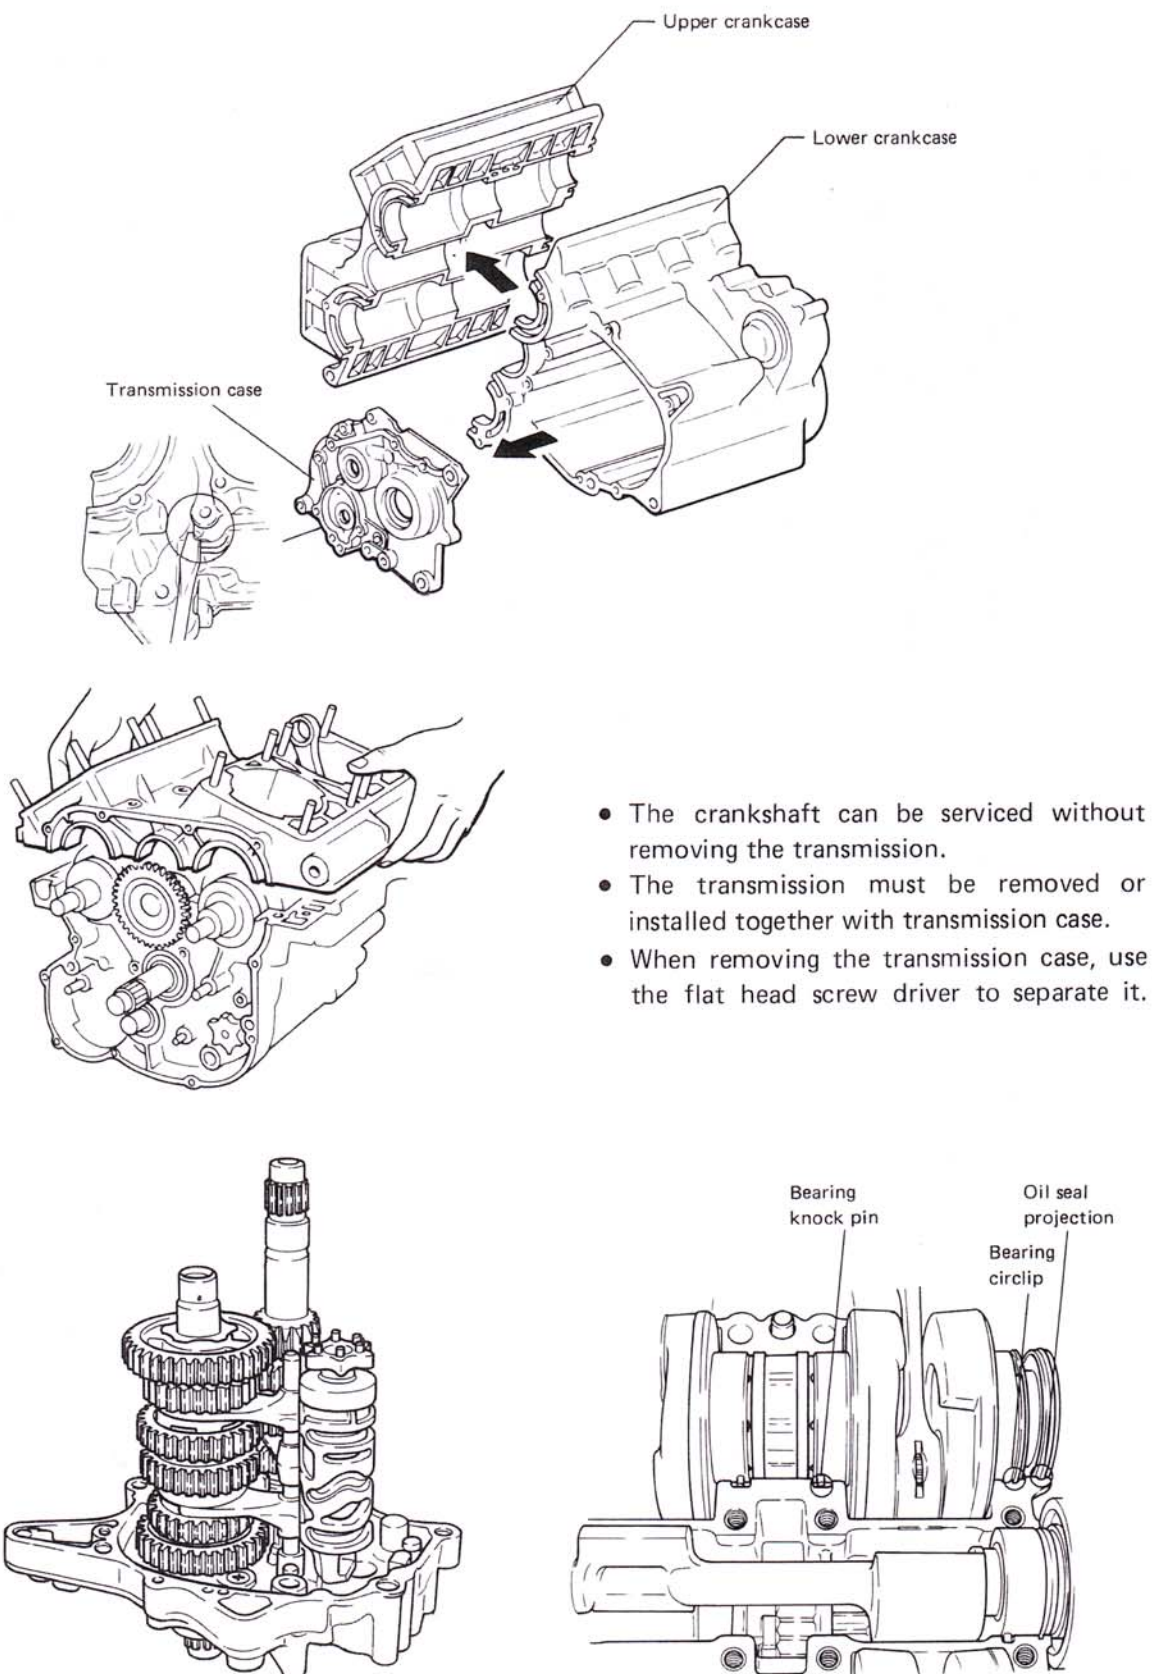


TRANSMISSION ASSEMBLY

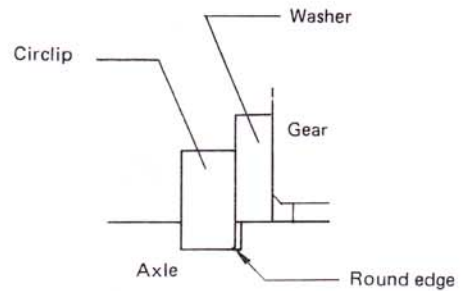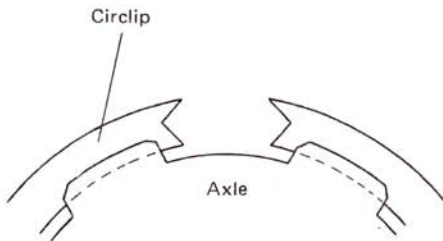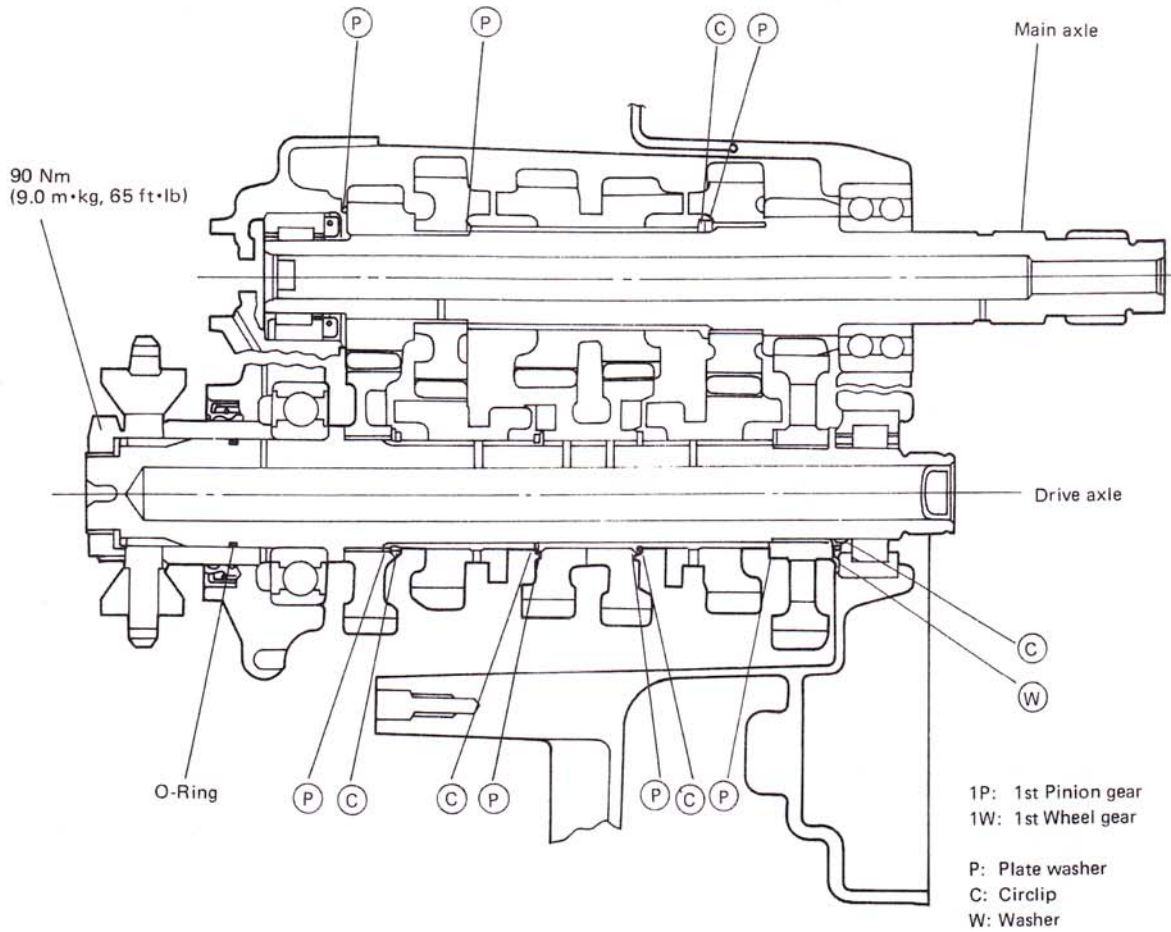

Primary reduction: $69T/31T = 2.225$
 Secondary reduction: $38T/15T = 2.533$
 Gear ratio: 1st: $36T/15T = 2.400$
 2nd: $32T/19T = 1.684$
 3rd: $30T/22T = 1.363$
 4th: $28T/24T = 1.166$
 5th: $24T/23T = 1.043$
 6th: $23T/24T = 0.958$

CRANKCASE TIGHTENING SEQUENCE

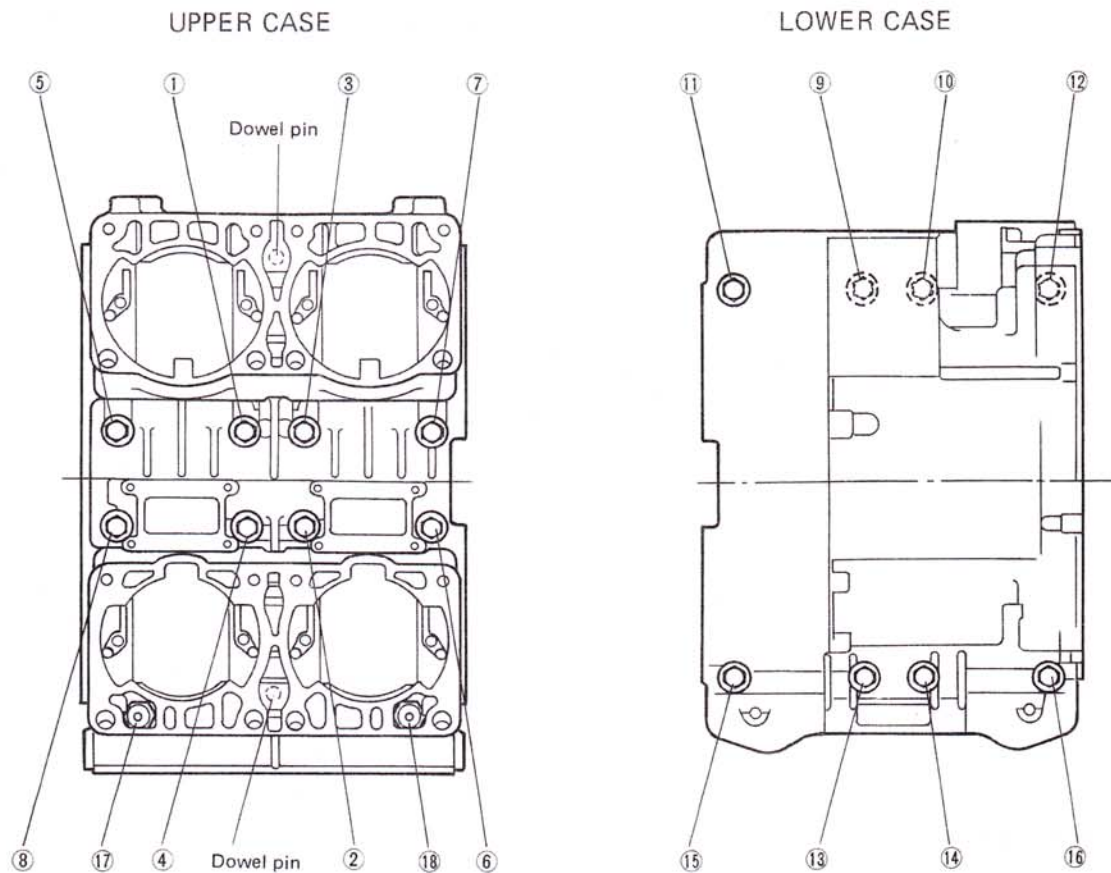

Tighten torque

1st: ① ~ ⑧ T 5 Nm (0.5 m·kg, 3.6 ft·lb)

2nd: ① ~ ⑧, ⑰ ⑱, ⑨ ~ ⑯ T 25 Nm (2.5 m·kg, 18 ft·lb)

Components


No. 5, 8 → Flange bolt (L = 65 mm (2.56 in)) and washer

No. 17, 18 → Screw and washer

No. 12 → Nut and washer


OTHERS → Flange bolt and washer

AIR FILTER

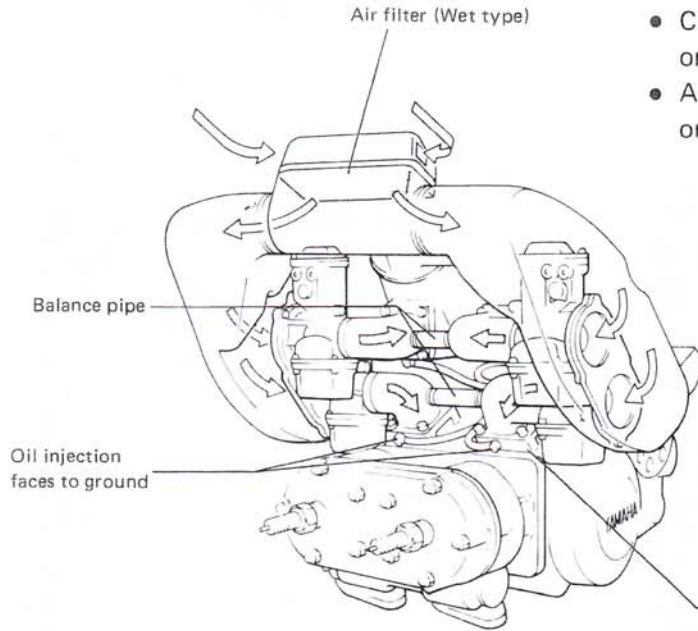

- Cleaned at 6 months or 6,000 km
- Air cooled 2-stroke engine oil or Foamd air filter oil


REED VALVE

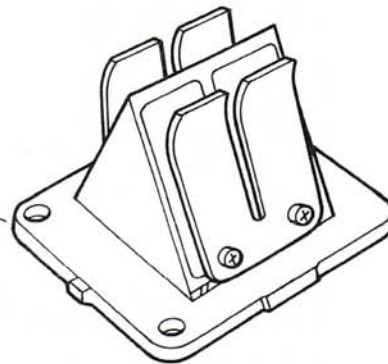



These two lines should be faced to cylinder head side. (Cylinder head side)

CARBURETOR



Section view

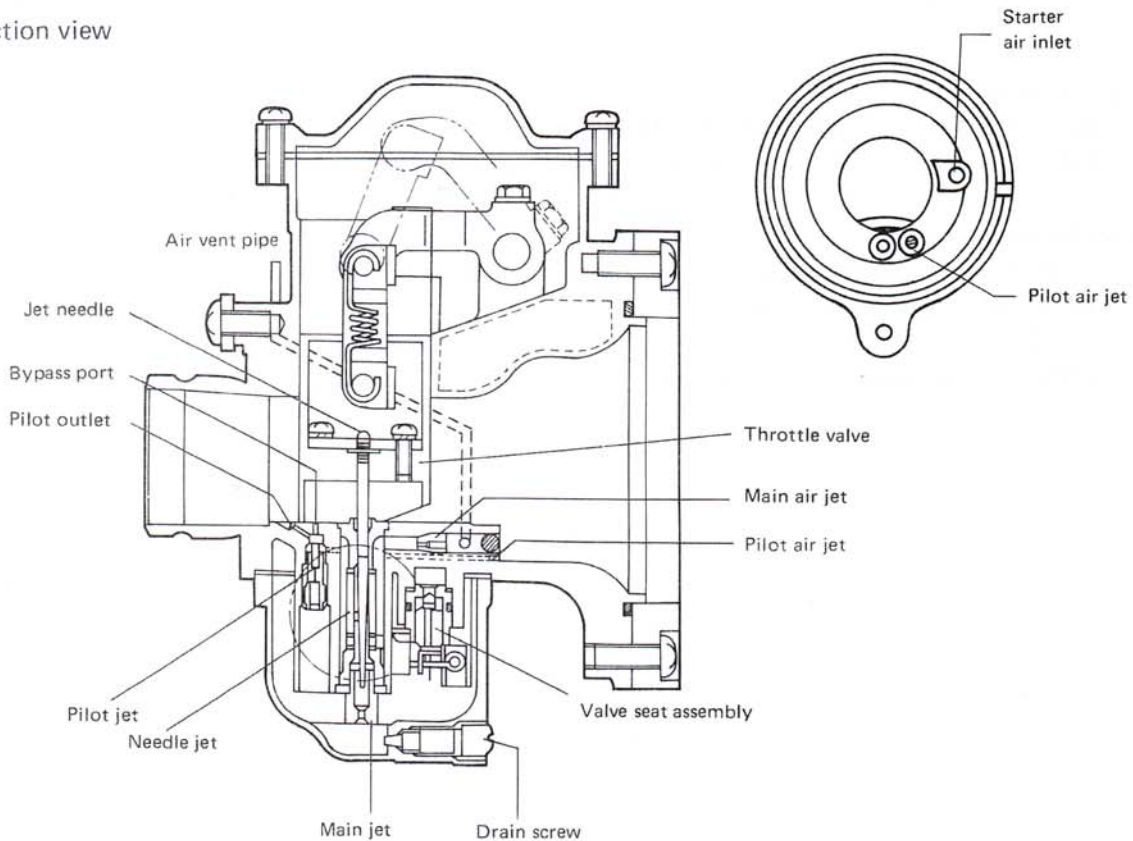

Adjustment

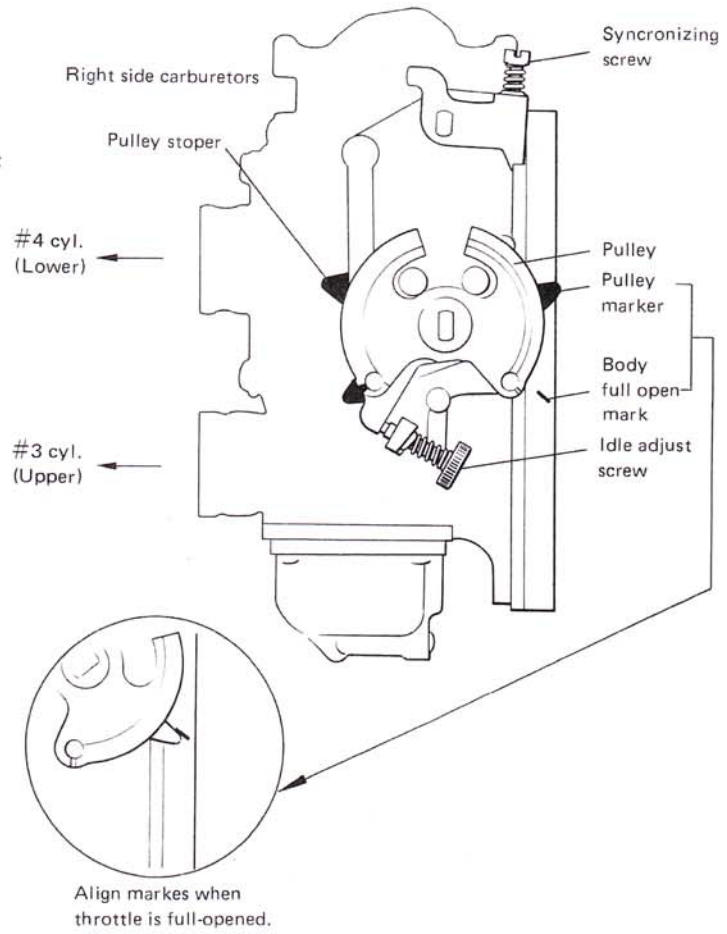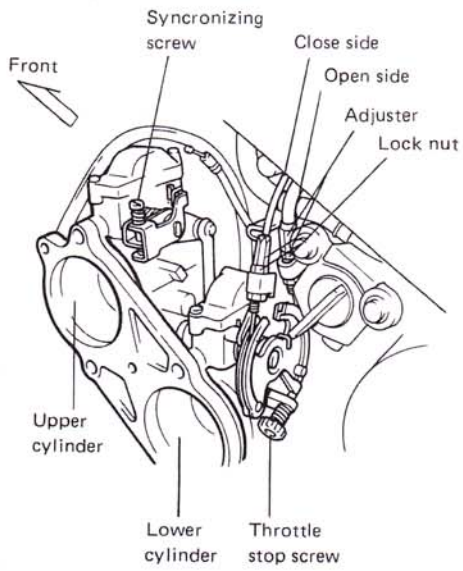


Synchronizing adjustment

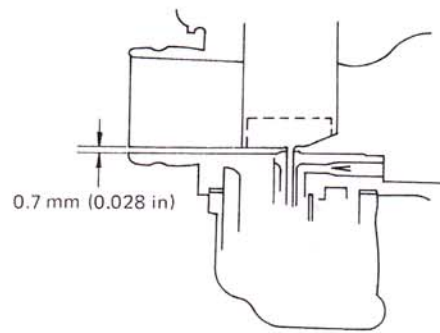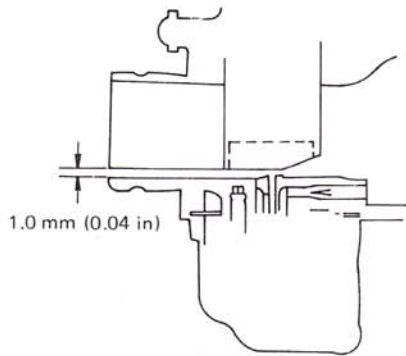


[For idling opening]

Fuel level

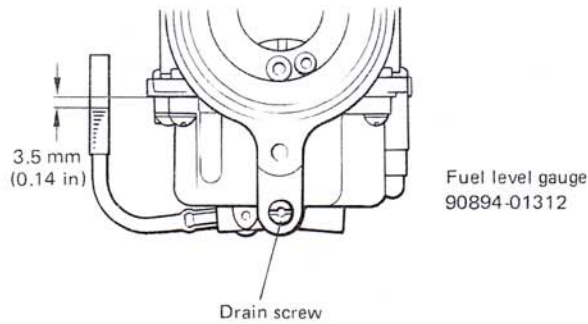

Starter

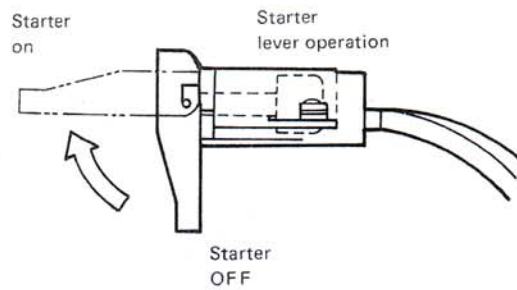

Carburetor adjustment (with the carburetor removed from the engine)

After reassembling the carburetor, be sure to make this adjustment first:


1. Carburetor for the lower cylinder
Using the idle adjust screw, adjust the throttle valve height to 1 mm (Use a 1 mm wire as a thickness gauge).
2. Then adjust the height of the throttle valve for the upper cylinder side to 1mm using the synchronizing screw.
3. Using the idle adjust screw, adjust the heights of the throttle valve for both cylinders to 0.7 mm (Use a 0.7 mm wire).

Synchronization for both right and left side of carburetors


After installing the carburetor to the chassis, be sure to make this adjustment:

1. Adjust the free play of the throttle grip to 5 ~ 7 mm at the grip flange.
2. Make sure the pulley contacts the stopper at full-throttle and contacts the idle adjust screw at closed-throttle. Make the same check for both right and left carburetors.
3. When both side carburetors are opened fully, align the pulley marker with the full open mark by adjusting the open-wire.
4. With the closed-throttle, check to see if the close-wire has a little amount of free play.


YPVS (Yamaha Power Valve System)

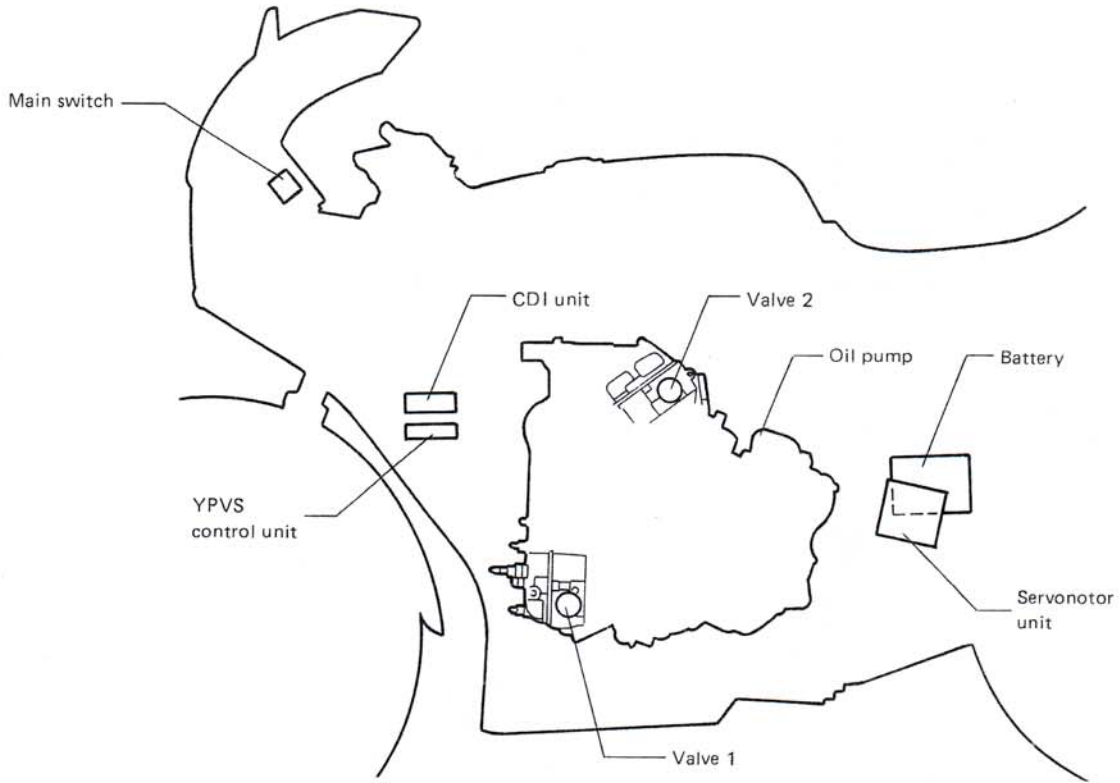


Basic operation (engine rpm vs. valve opening rate)

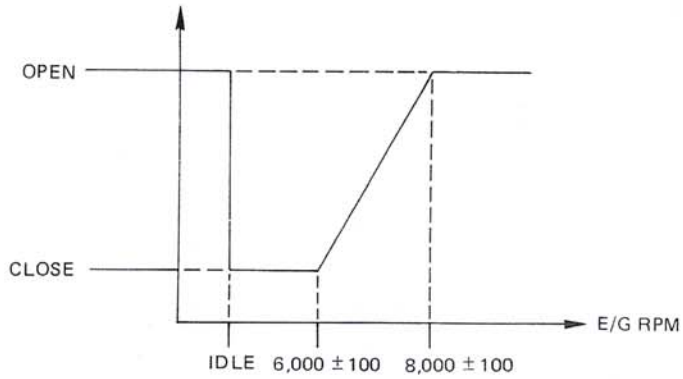

YPVS operation (time vs. valve opening rate)

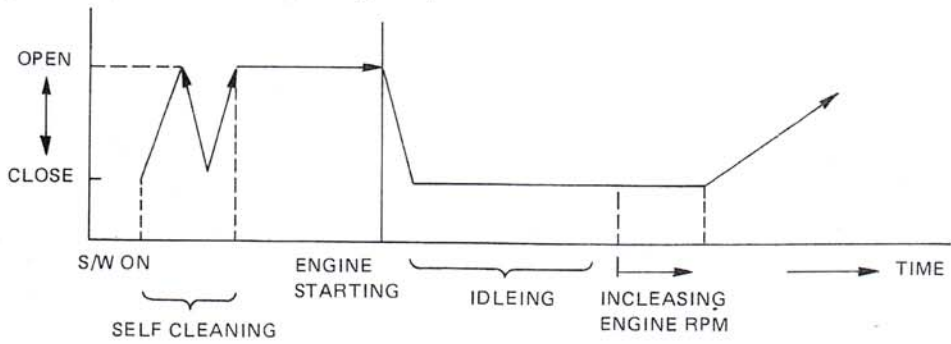

INSTALLATION/ADJUSTMENT

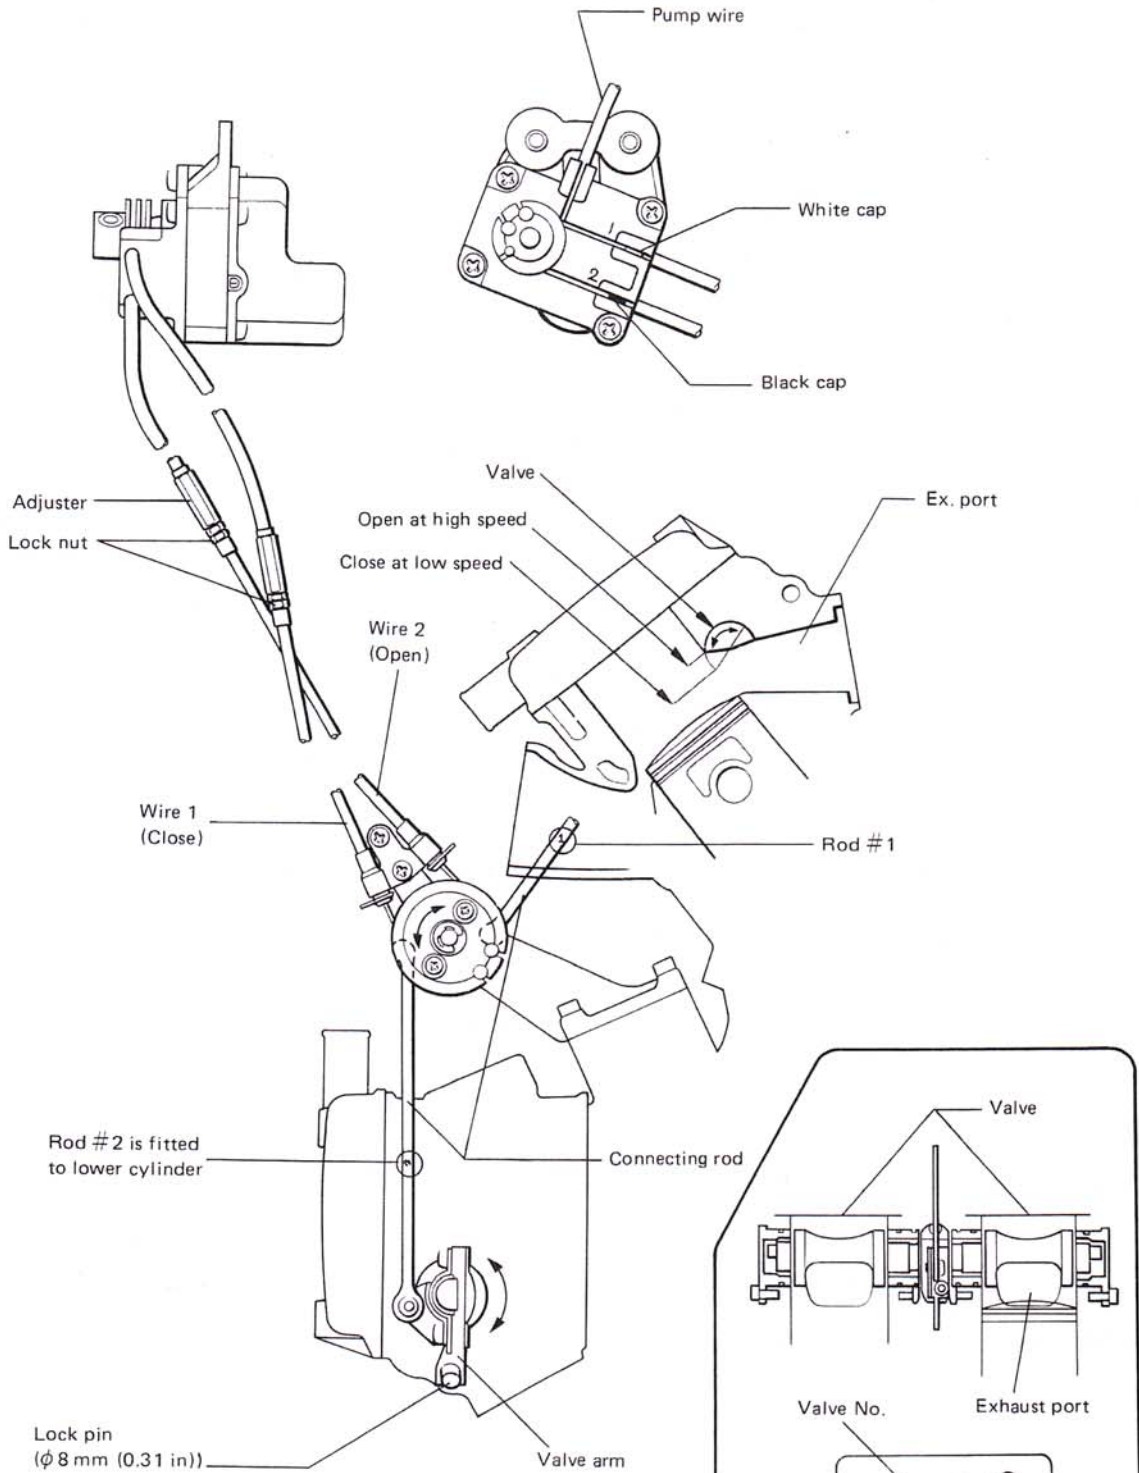

VALVE LOCATION	
Valve number	Cylinder number
Valve 1	# 2 cyl. # 3 cyl.
Valve 2	# 1 cyl. # 4 cyl.

Valve numbers face toward muffler side.


YPVS cable adjustment

After assembling the YPVS, make the following adjustment.



1. Turn on the main switch, and set YPVS in full-open position.
2. Using an 8 mm (0.31 in) diameter pin, and align the valve arm with the hole in the cylinder.

3. With this condition, loosen both adjuster of wires which have no free-play. Back off the adjuster 1/2 turn from this tightest position and lock the adjuster by the lock nut.
4. Remove the lock pin, and by turning the main switch on and off, make sure the valve arm aligns with the hole in the cylinder.


AUTOLUBE SYSTEM (OIL PUMP)

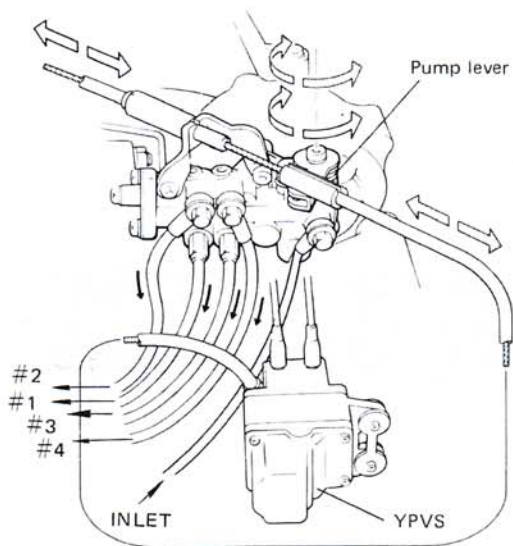

RECOMMENDED OIL
AIR COOLED 2-STROKE ENGINE OIL
2.0ℓ

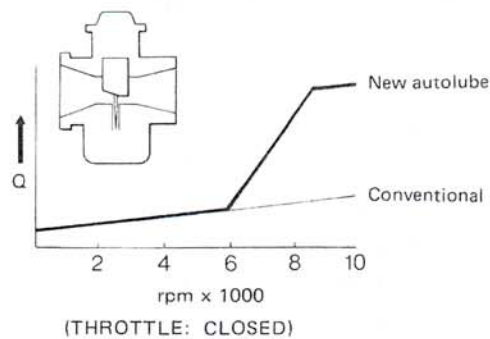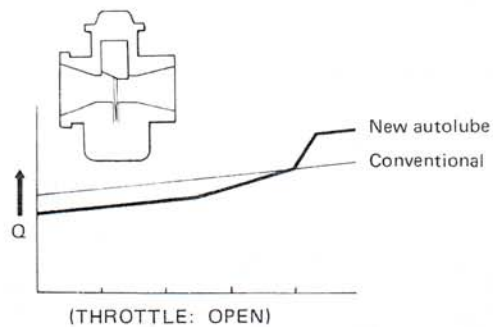

OIL PUMP OUTPUT


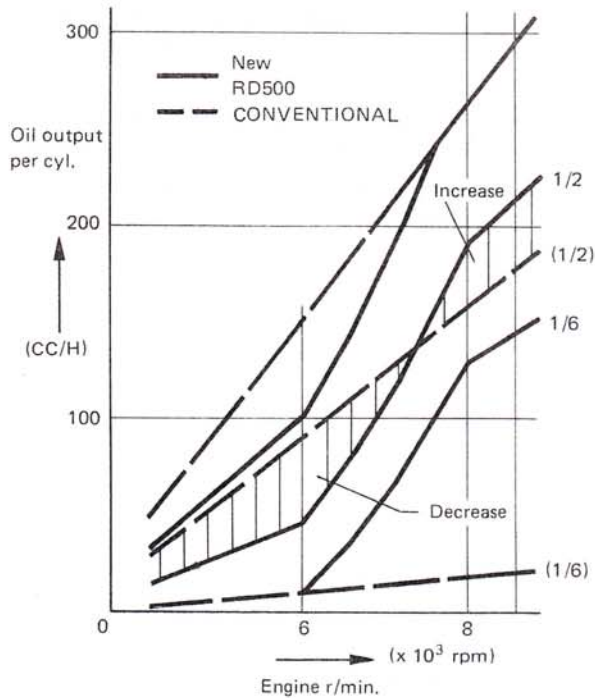


OIL OUTPUT

On the new RD500, Autolube oil is properly supplied to the engine depending on the engine load conditions. The oil output is controlled by the engine speed, throttle opening and YPVS operation. The oil output increases as the engine speed rises, and at 5,000 rpm or high where YPVS operates, and the oil output adds depending on YPVS opening (engine speed). As the throttle opening increases, the oil output is also increased. In this way, the oil output changes according to the variations in the throttle and YPVS openings. It is greatly affected by the YPVS opening when the throttle opening is smaller.

CONSTRUCTION AND OPERATION


[INTAKE STROKE]

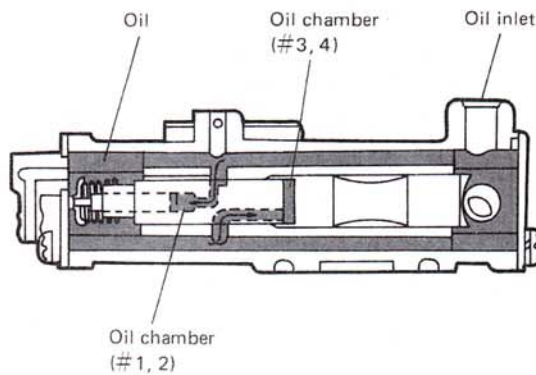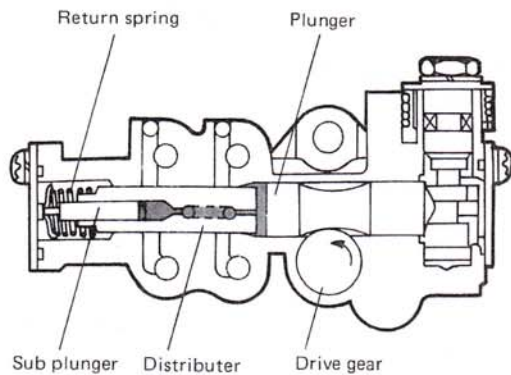

This illustrations shows the intake stroke and oil pump operates as follows.

1. Oil from oil tank flows around the plunger and the distributor.
2. The plunger is rotated by the drive gear, and plunger and distributor are moved to right side by the return spring, and a vacuum is produced in the oil chamber. When the oil inlet of the distributor aligns with the oil passage in the oil pump, oil flows into the oil chamber.

[OUTPUT STROKE]

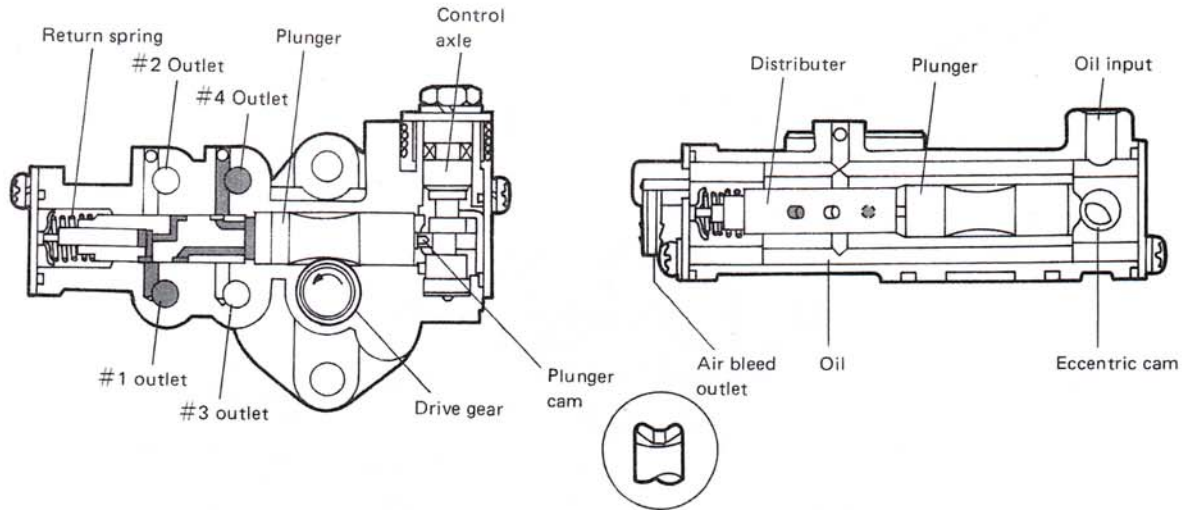

- When the plunger is turned further, it is moved to left side by the cam, thus compressing the oil. When oil outlet of the distributor aligns with the pump discharge port, the oil in the oil chamber overcomes the check ball spring force, and the oil is supplied to cylinders # 4 and # 1.

Operation of oil pump

Plunger and distributor

Both parts are rotated by the drive gear, and the oil is inhaled and discharged at every 90° turn of the plunger operated by the return spring and the plunger cam.

Control lever (axle)

The excentric cam on the axle is turned by the control lever to change the plunger stroke. The amount of lever movement is determined depending on opening of both the throttle and YPVS.

When the YPVS is in full-open position with the throttle narrow-opened, the control lever moves only half of fuel movement.

Sub plunger

Fixed to the pump body.

Oil chamber (# 1, 2)

When the plunger moves back and forth, the oil chamber volume changes, as the sub plunger is fixed to the oil pump.

Oil chamber (# 3, 4)


The oil chamber volume changes depending on plunger stroke.

Oil pressure check ball

The check ball is installed in discharge port. It's check pressure is 0.2 kg/cm².

The check valve maintains a constant oil pressure and prevents oil from flowing directly into the engine.

PUMP WIRE ADJUSTMENT

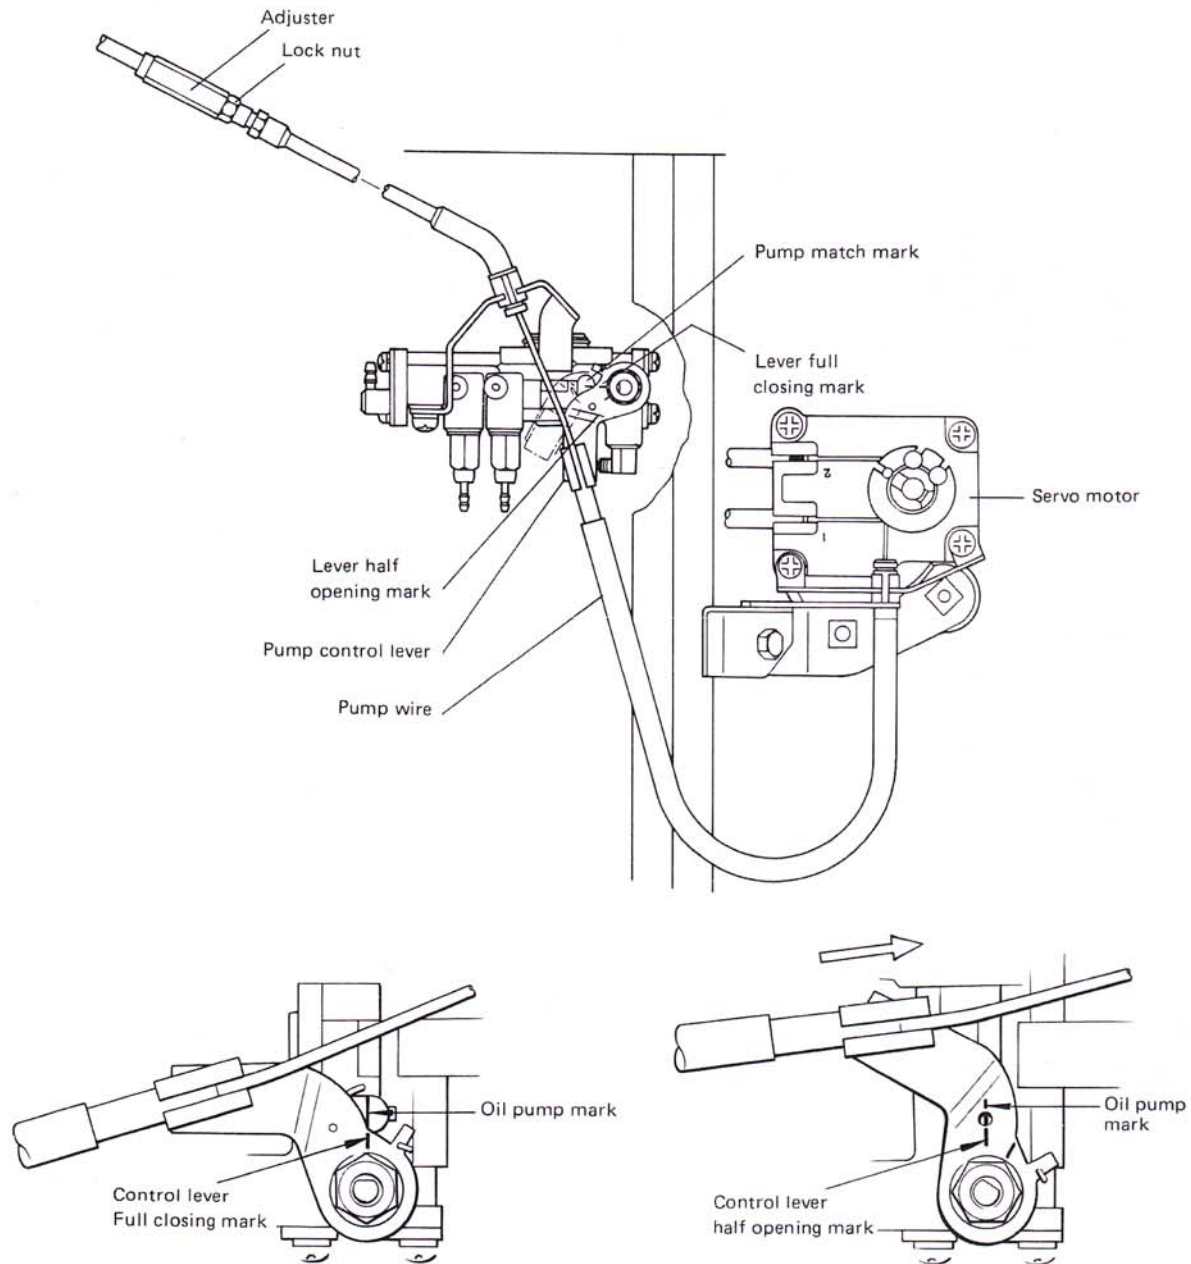

[YPVS – Full close]


[YPVS – Full open]

OIL PUMP WIRE ADJUSTMENT

1. Turn on the main switch.
2. Twist the throttle grip a little so that the throttle wire has no free-play.
3. Then adjust the oil pump control lever so that the 1/2 open mark on the control lever aligns with the mark on the pump body.
4. Turn the main switch off and on, and make sure that the full-closed mark on control lever aligns with the pump mark.

CHASSIS

TIRE

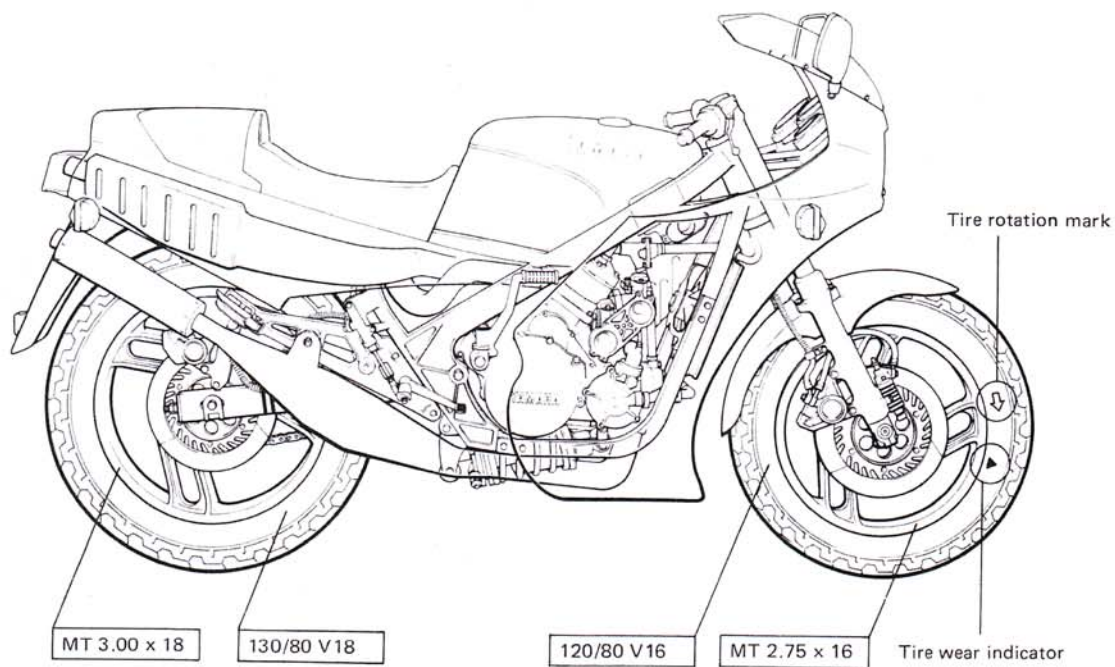


Manufacturer	MICHELIN	DUNLOP	YOKOHAMA
Type			
FRONT	A48	K125	F101
Rear	M48	K225	R101

TIRE PRESSURE

	Solo	Hig speed or with passenger
FRONT	1.75 kg/cm ²	2.0 kg/cm ²
REAR	2.00 kg/cm ²	2.25 kg/cm ²


FRAME (DETACHABLE DOWNTUBE)

- To remove the engine, the down-tube must be removed.

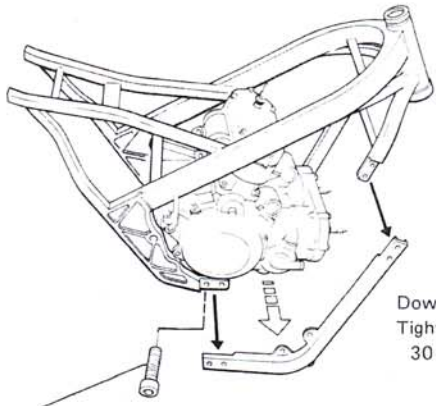

Down tube
Tightening torque:
30 Nm (3.0 m·kg, 22 ft·lb)



After removing down-tube,
retighten this bolt.

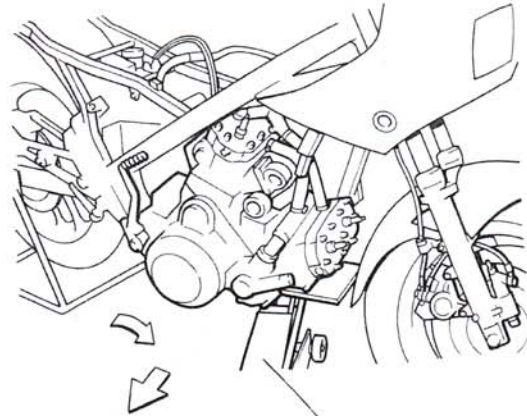

Suitable stand

- Place a Jack (for automobile) under the engine, and jack it up to remove the engine. Pull it a little front ward, and pull it out to right side.




FRONT FORK

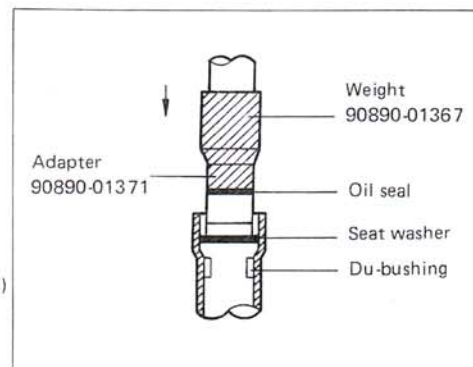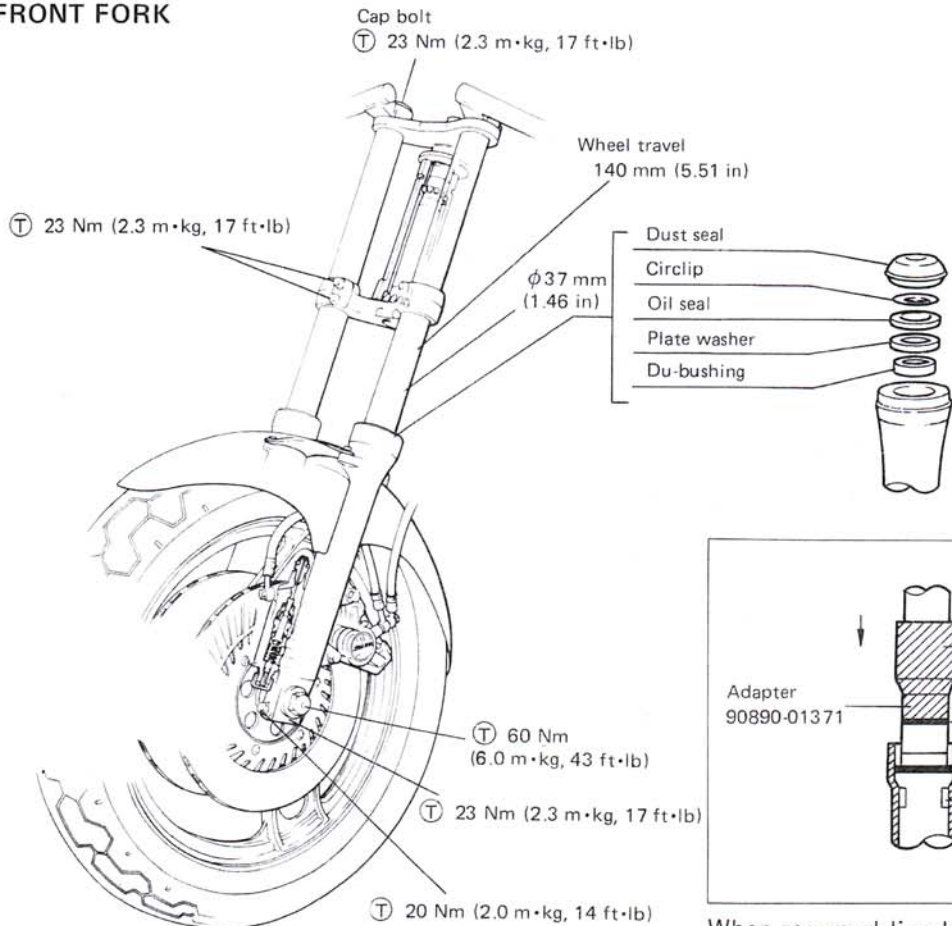

When reassembling bushing,
oil seal and dust seal, use
special tools.


ANTI DIVE SYSTEM

Anti dive adjustment should be same both side.

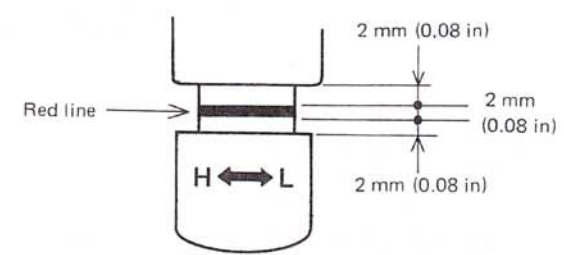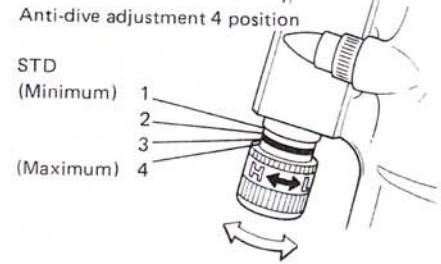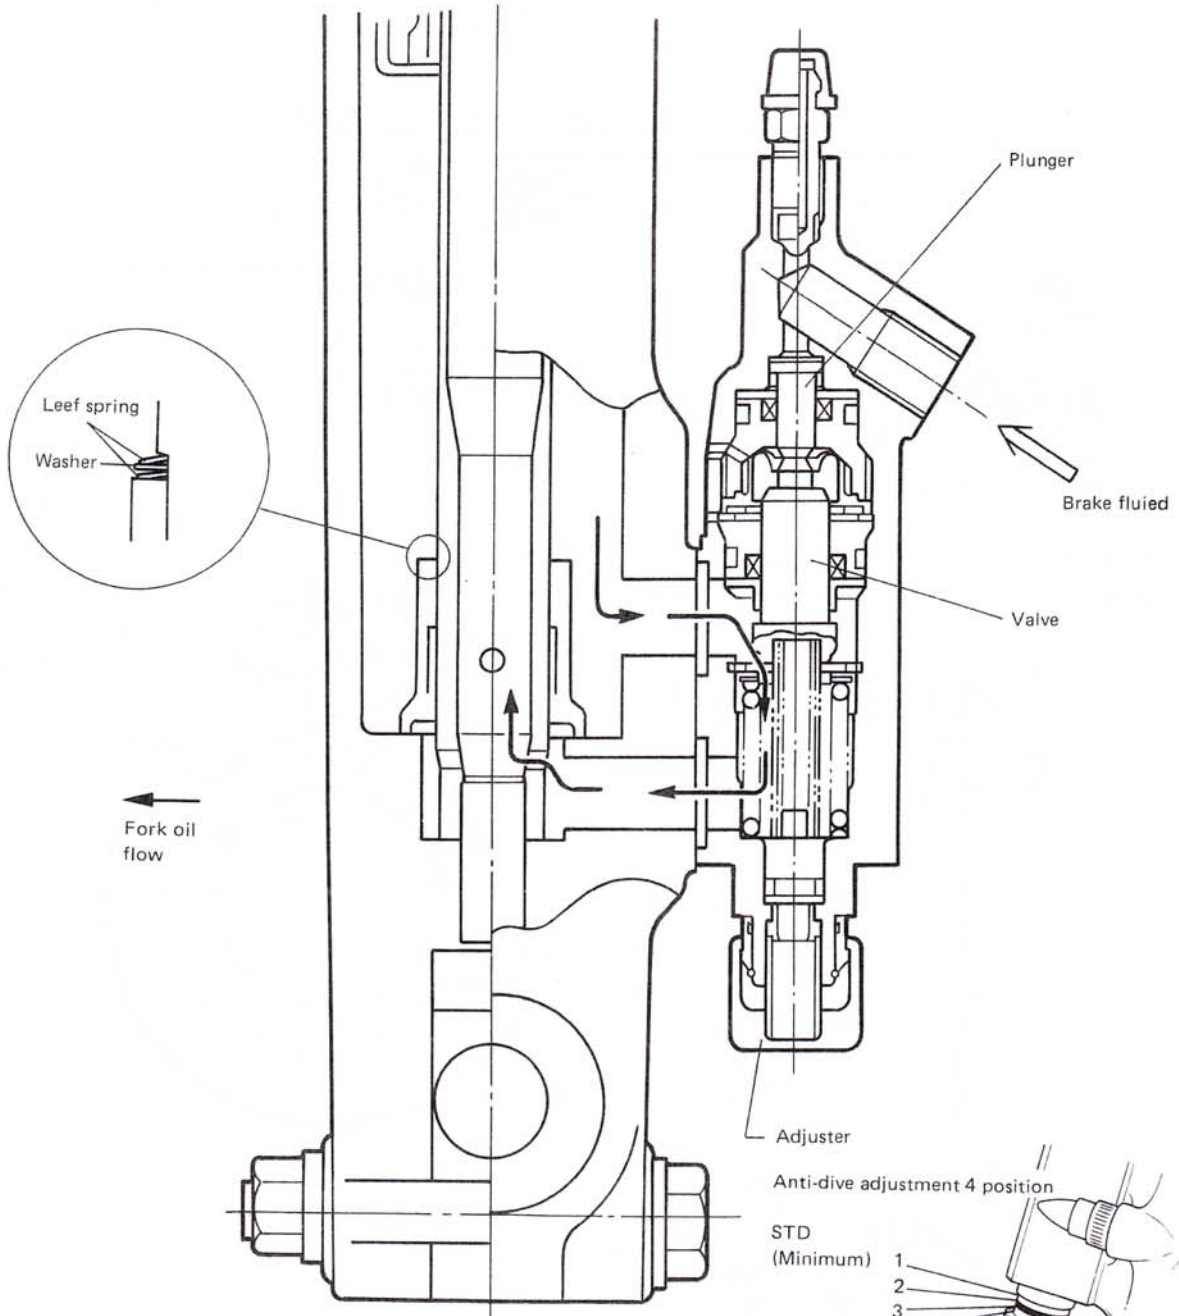


- Turning the adjuster counter-clockwise, increases anti-dive effect.


FRONT BRAKE (VENTILATED DISC)

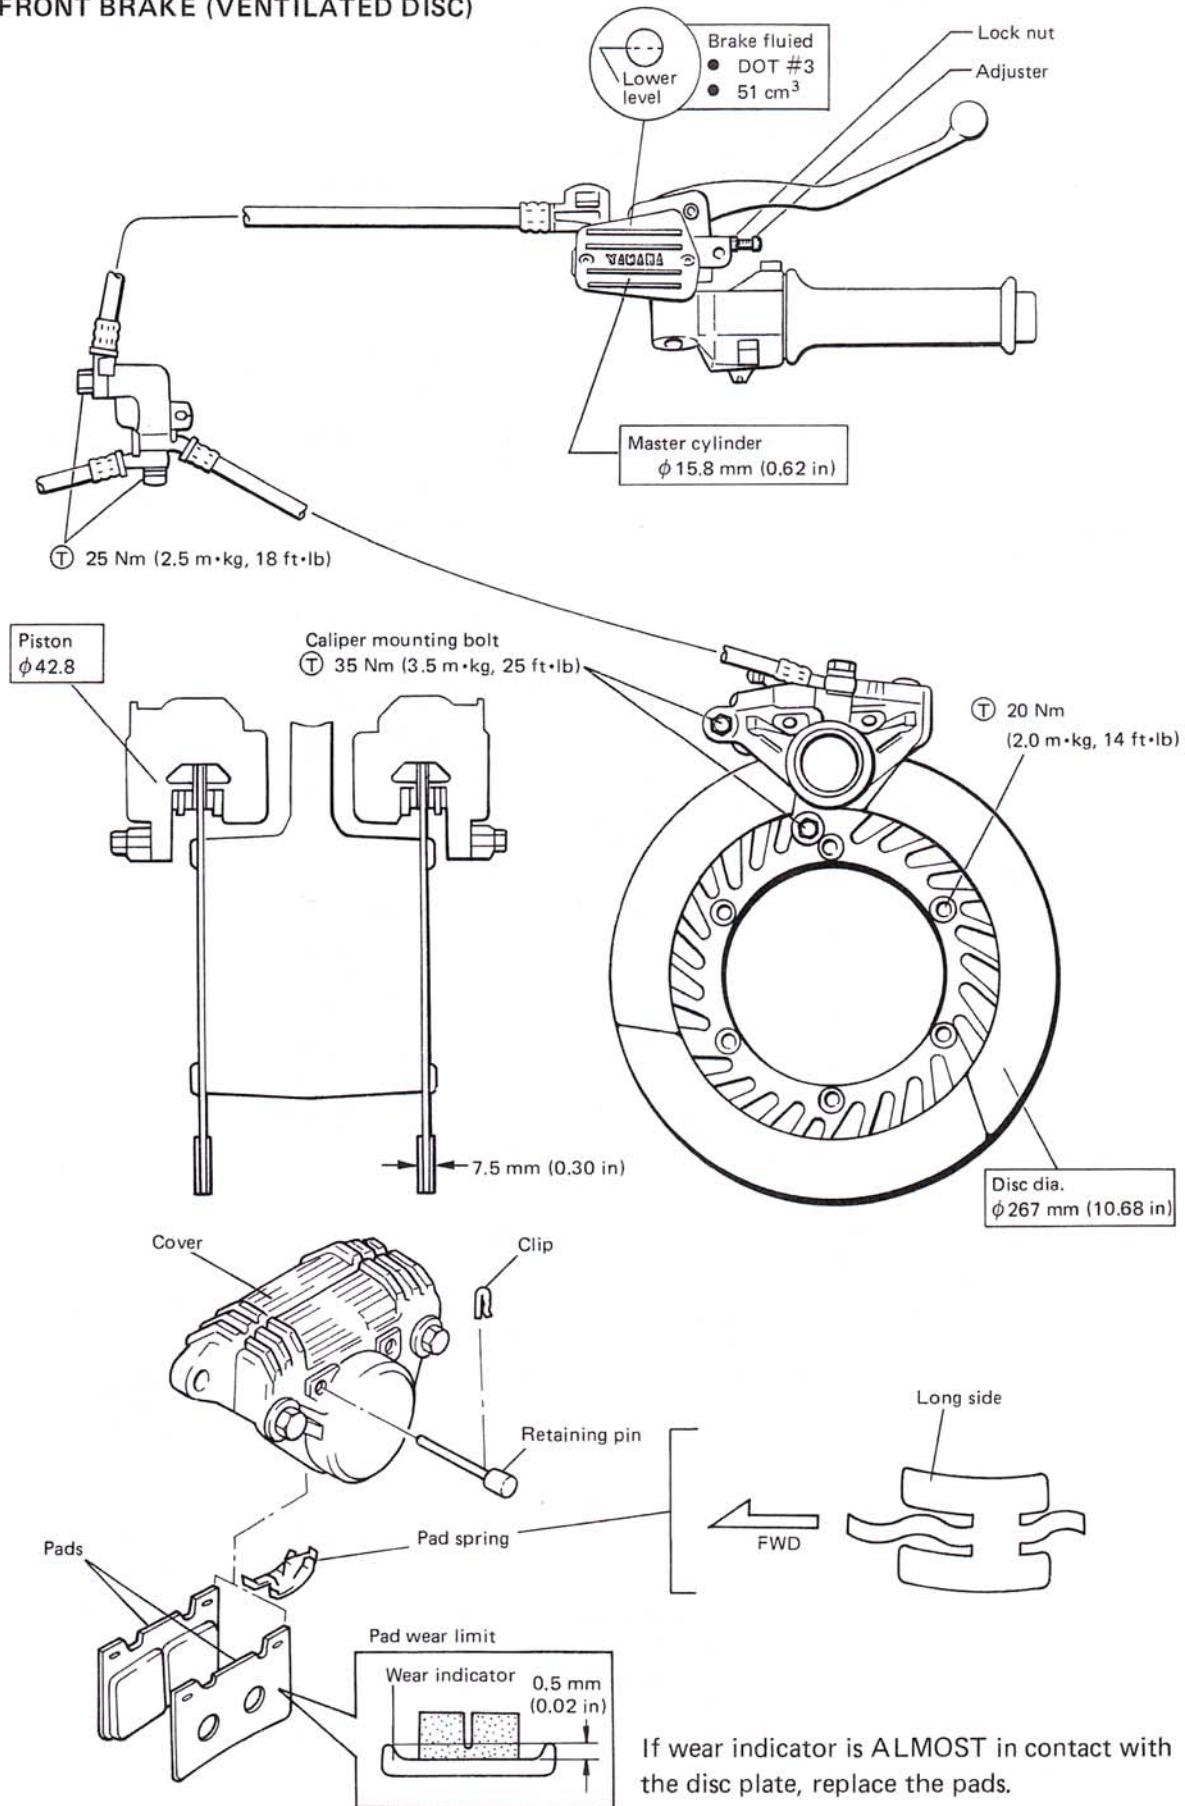

**REAR BRAKE
(VENTILATED DISC)**


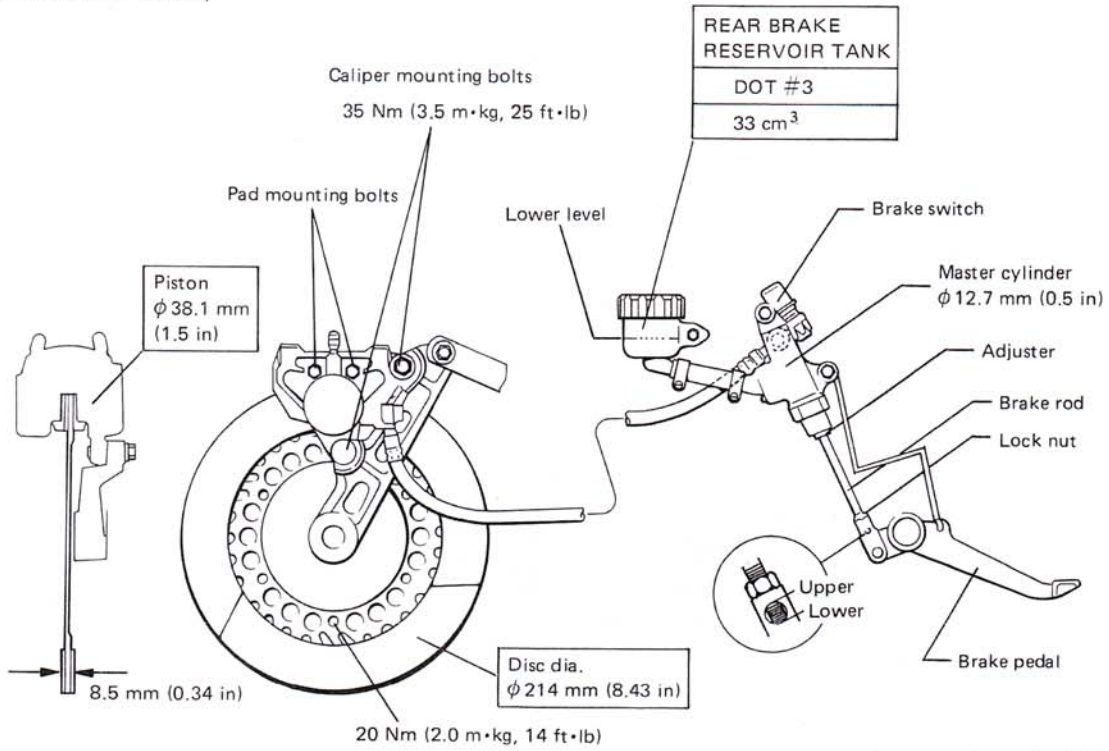


- Brake rod end should be positioned within upper and lower marks.


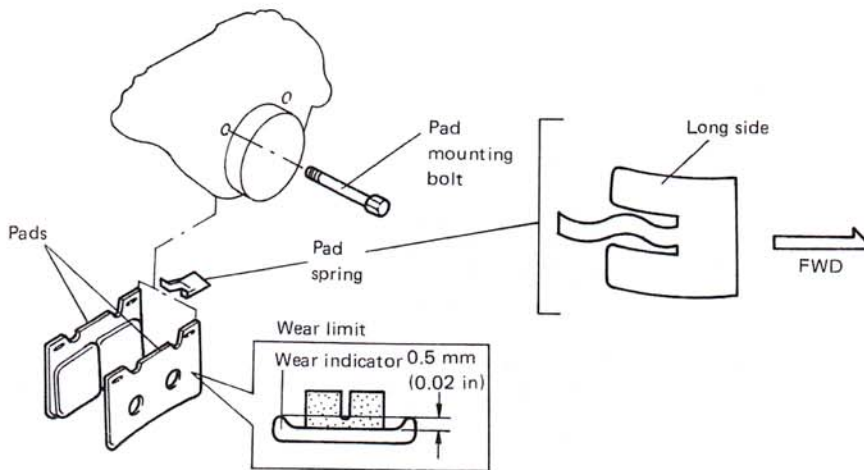


- If the wear indicator is ALMOST in contact with the disc plate, replace pads as a set.
- Before replacing pads, remove caliper mounting bolts first.

REAR SHOCK/REAR BRAKE

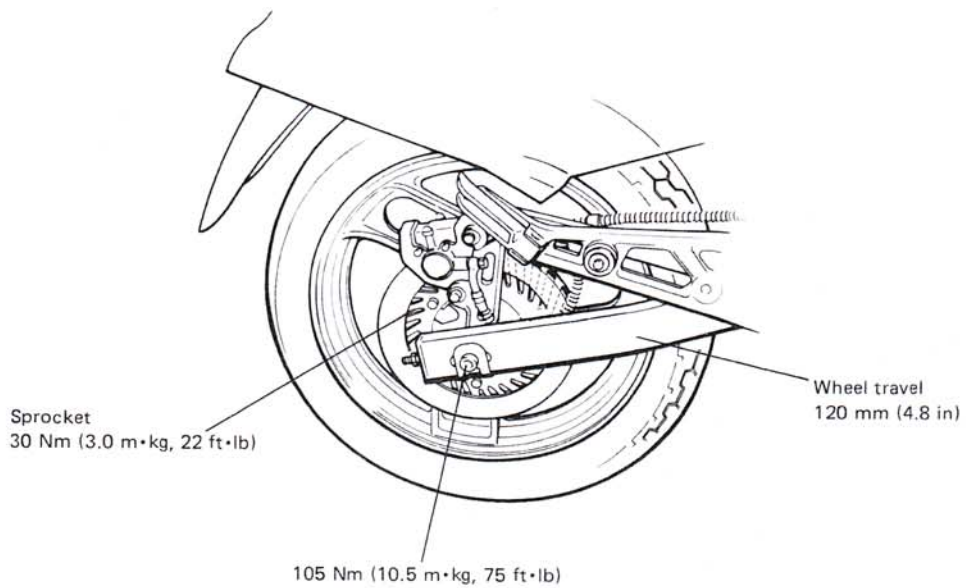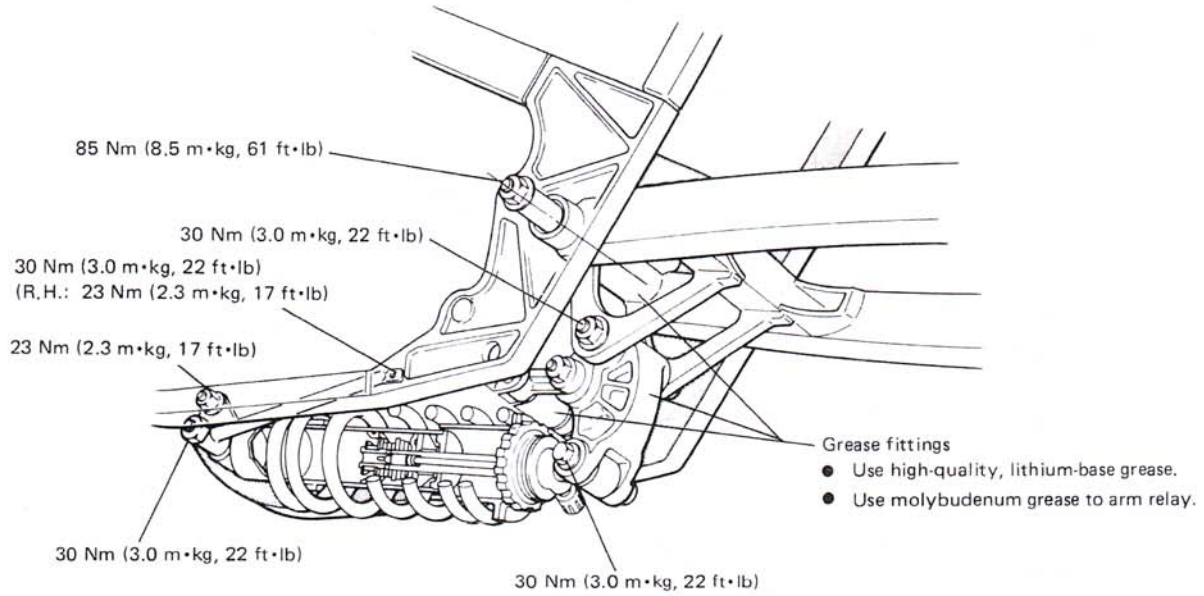


REAR SHOCK

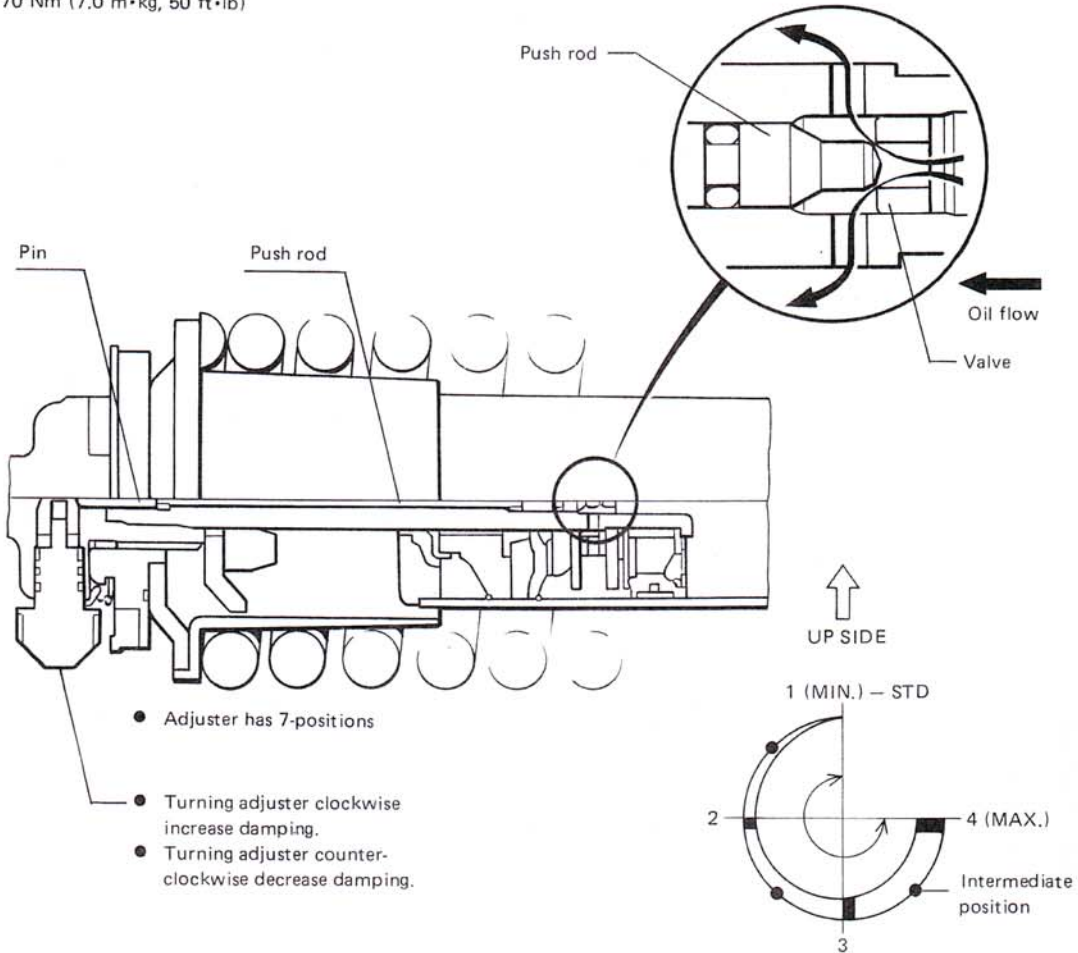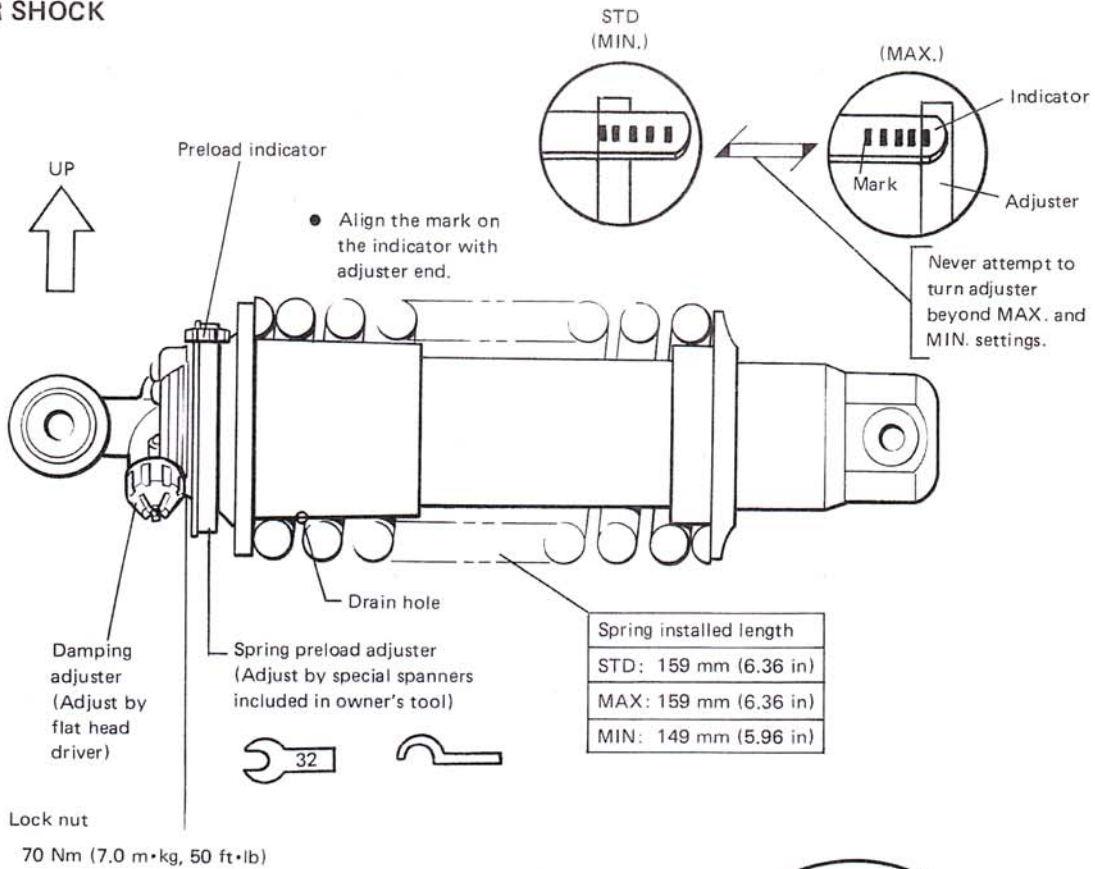


ELECTRICAL


BASIC CIRCUIT FOR RD500

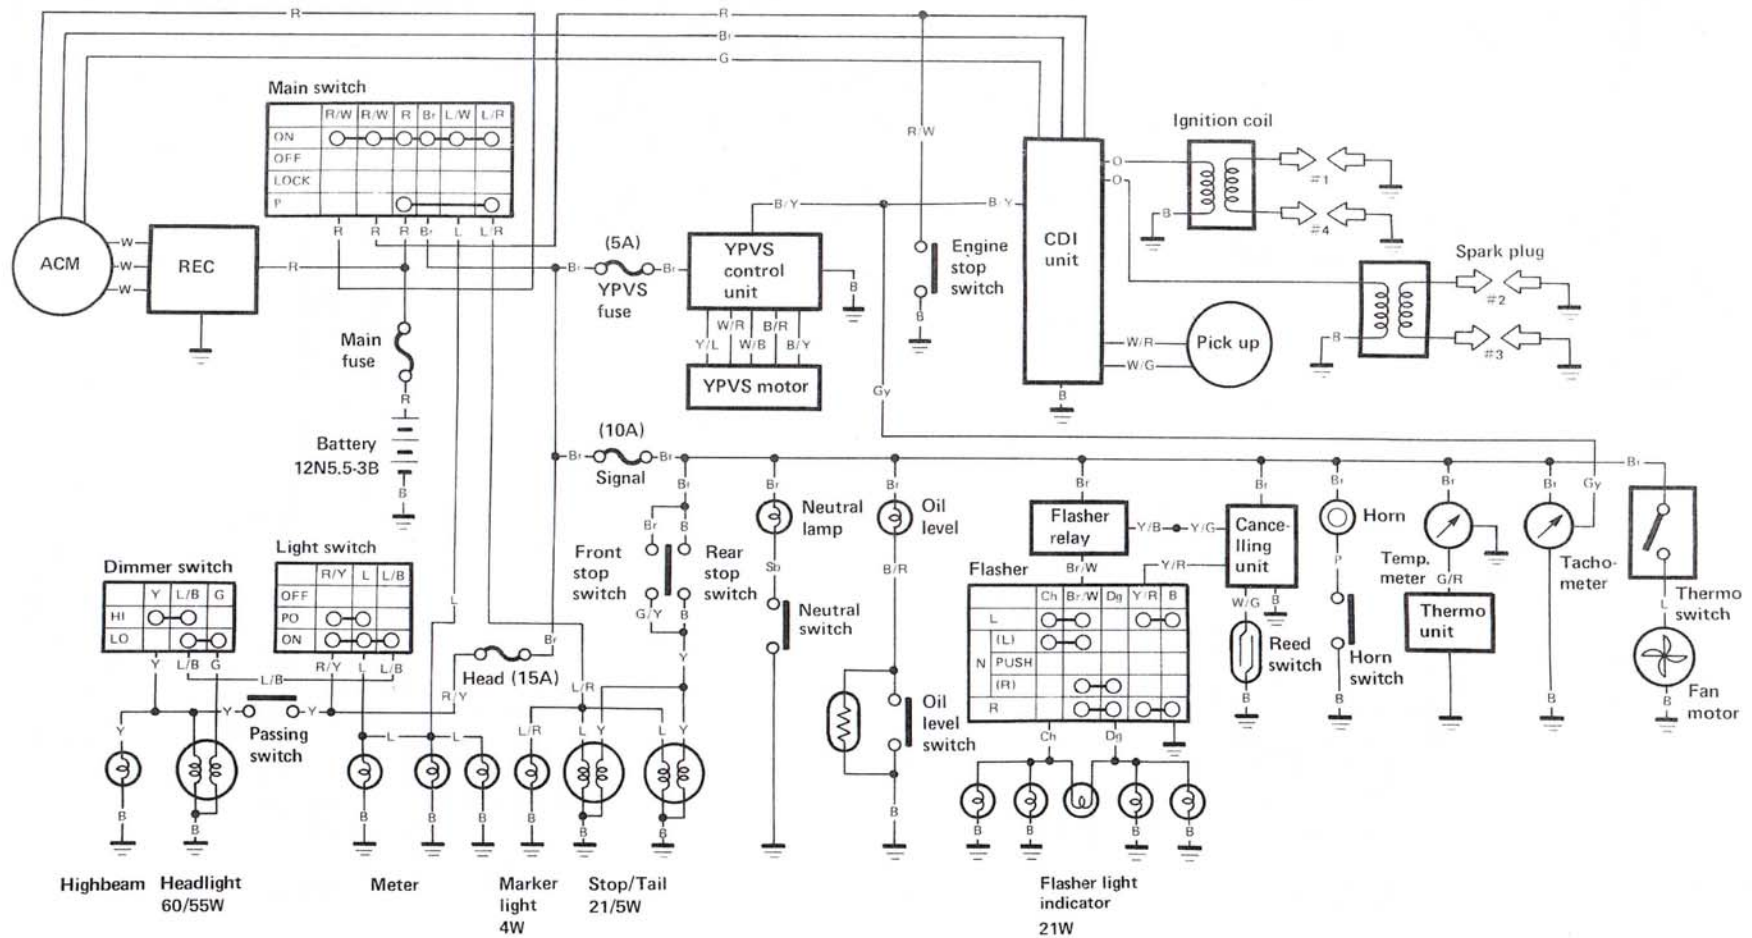

IGNITION TIMING

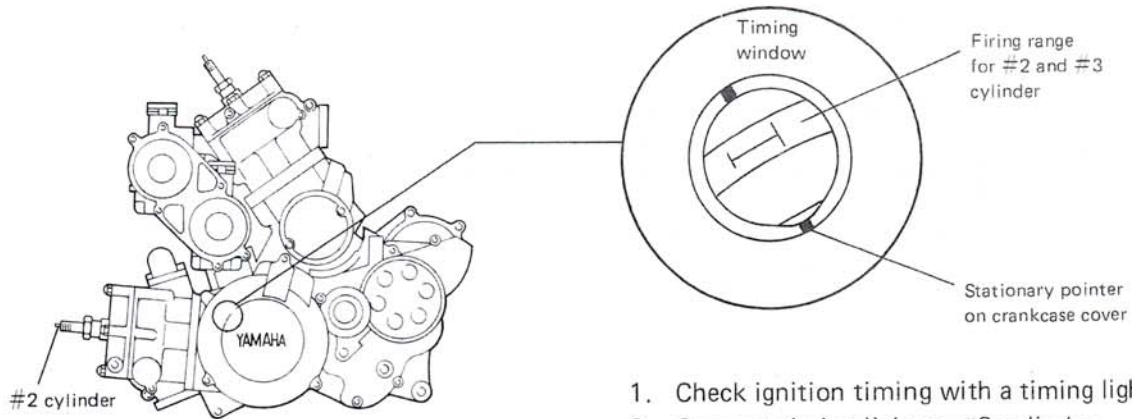


1. Check ignition timing with a timing light.
2. Connect timing light to #2 cylinder.
3. The stationary pointer should be within the firing range.

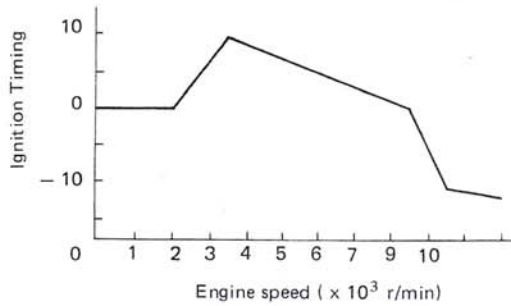


Specified ignition timing:
BTDC 19° at 1.250 r/min

IGNITION CIRCUIT

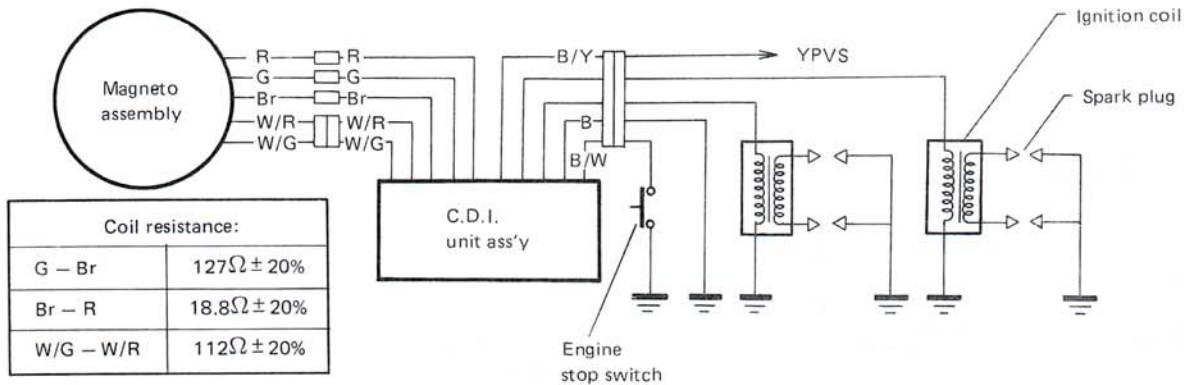


C.D.I. unit
block diagram

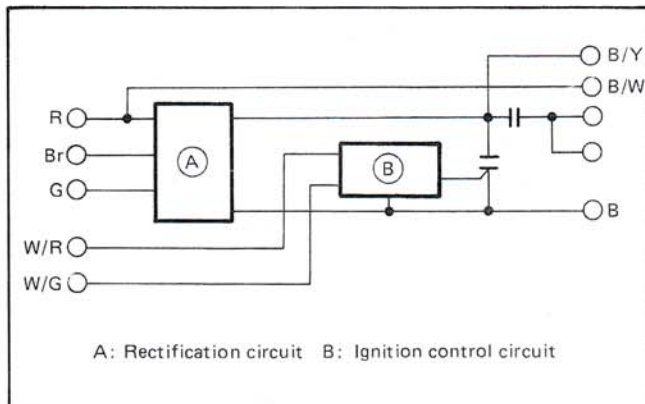

- O: Orange (For Ignition Coil)
- B: Black (For Ground)
- B/Y: Black/Yellow (C.D.I. Stop Signal to YPUS)
- B/W: Black/White (For Engine Stop)
- W/G: White/Green (For Pick-up Signal)
- W/R: White/Red (For Pick-up Signal)
- G: Green (For Ignition Charge)
- Br: Brown (For Ignition Charge)
- R: Red (For Ignition Charge)


CHARGING CIRCUIT

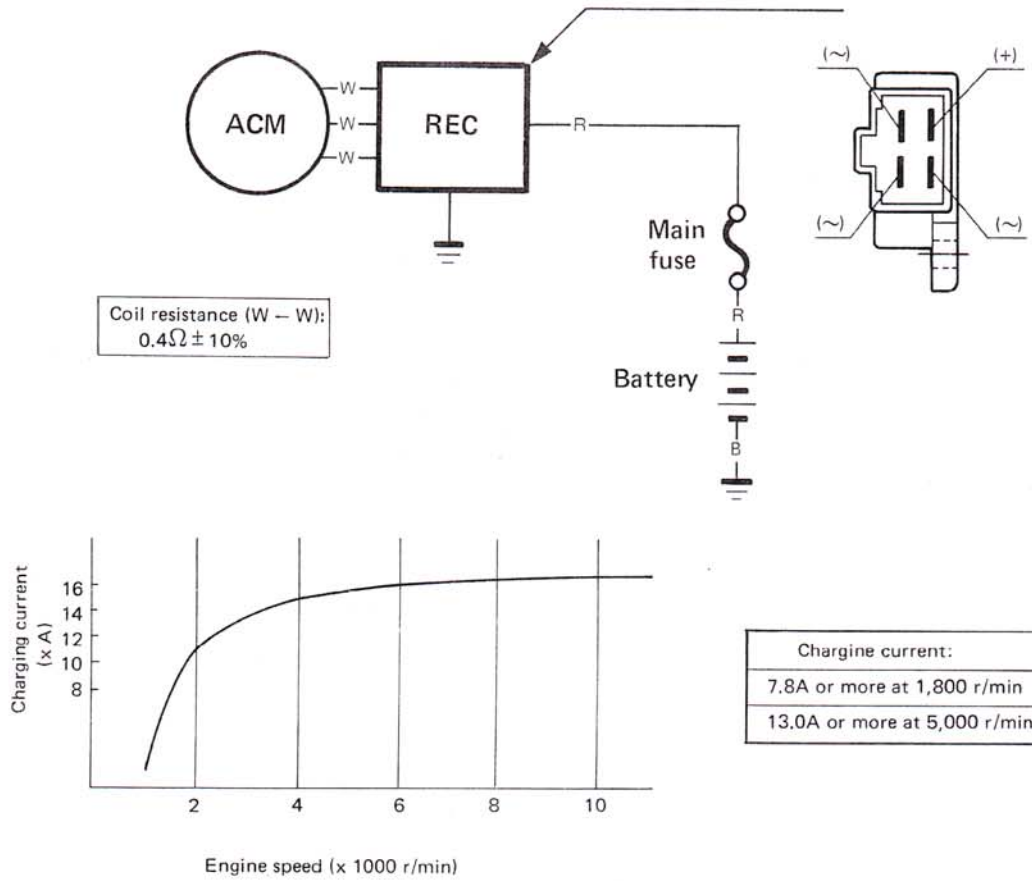


YPVS CIRCUIT



Main switch

	R/W	R/W	R	Br	L/W	L/R
ON	○	○	○	○	○	○
OFF						
LOCK						
P			○			○

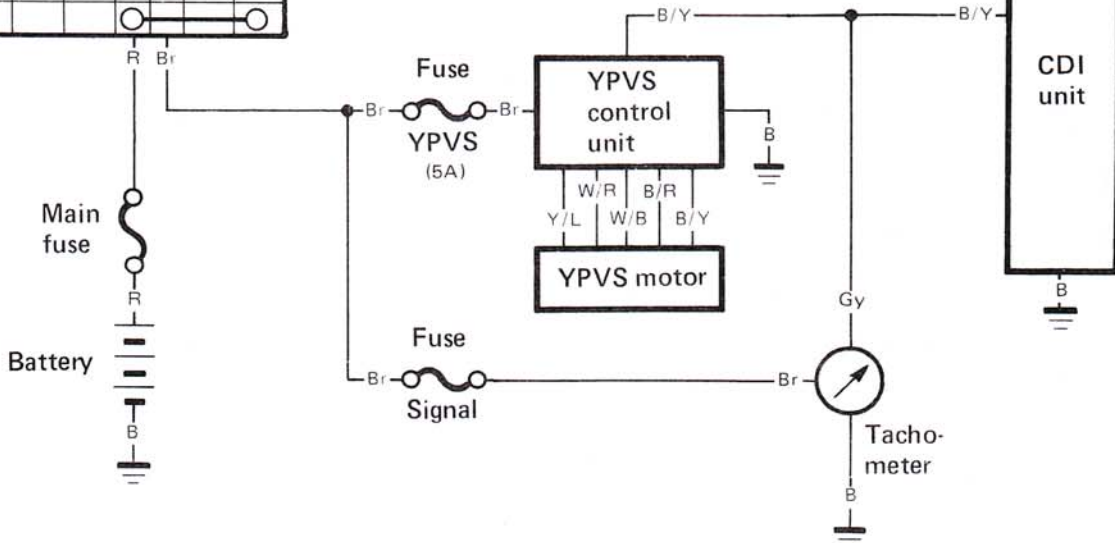


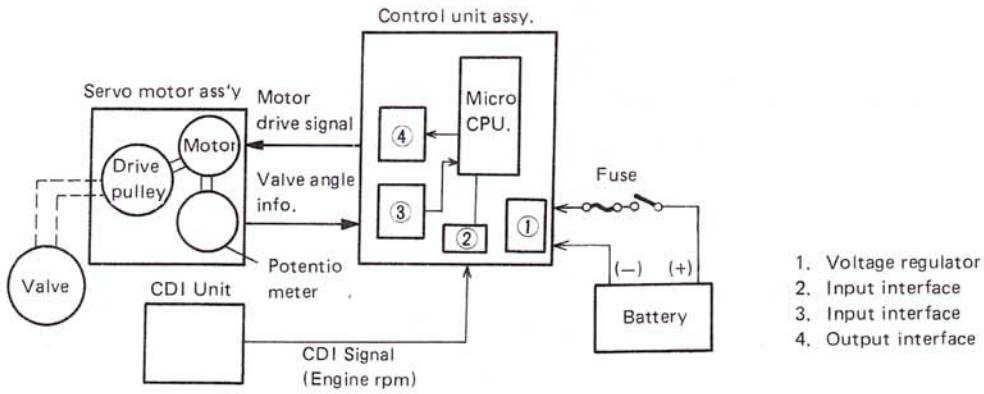


Control unit connector:

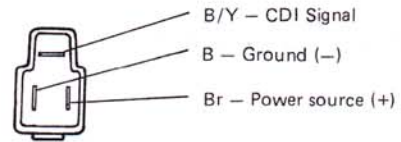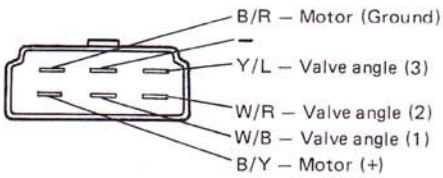

SERVO MOTOR

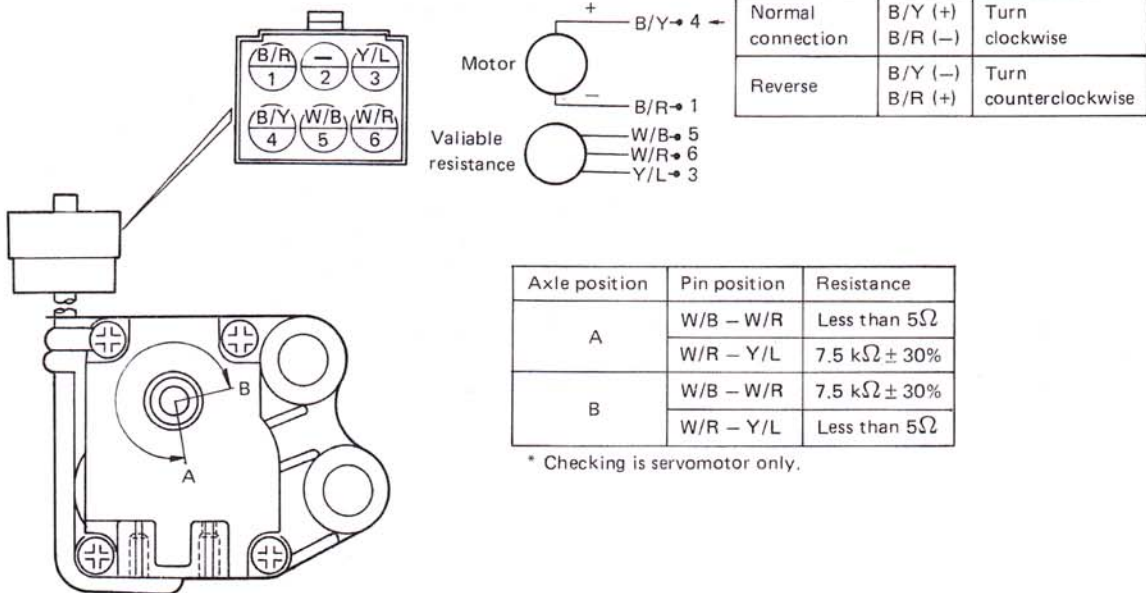


OIL LEVEL INDICATOR

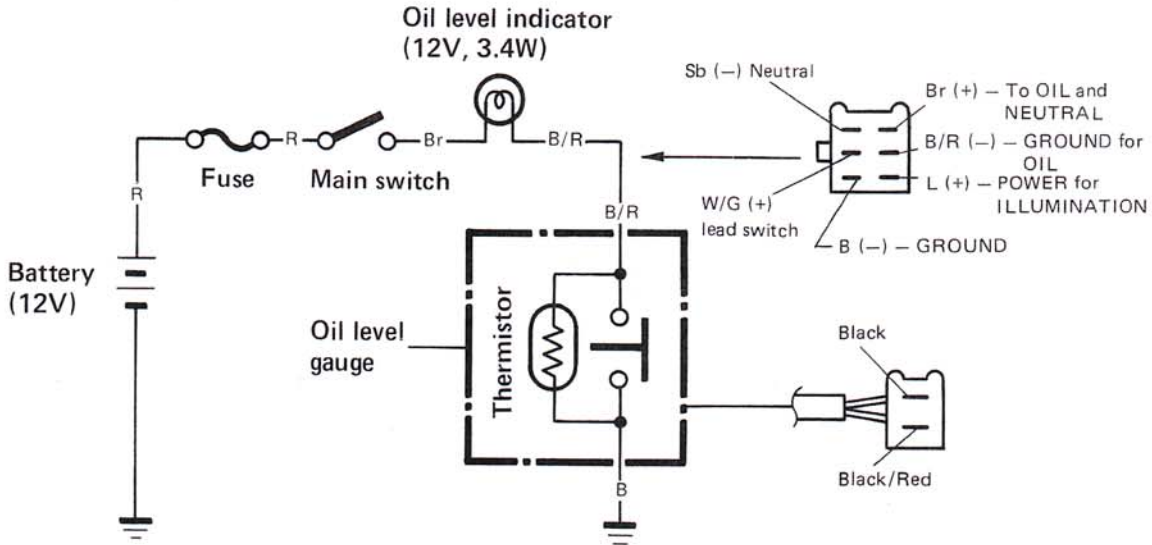

* Detailed of troubleshooting, refer to DT125/200's Service Guide.

FLASHER CANCELLING SYSTEM (EXCEPT FOR WEST GERMANY)

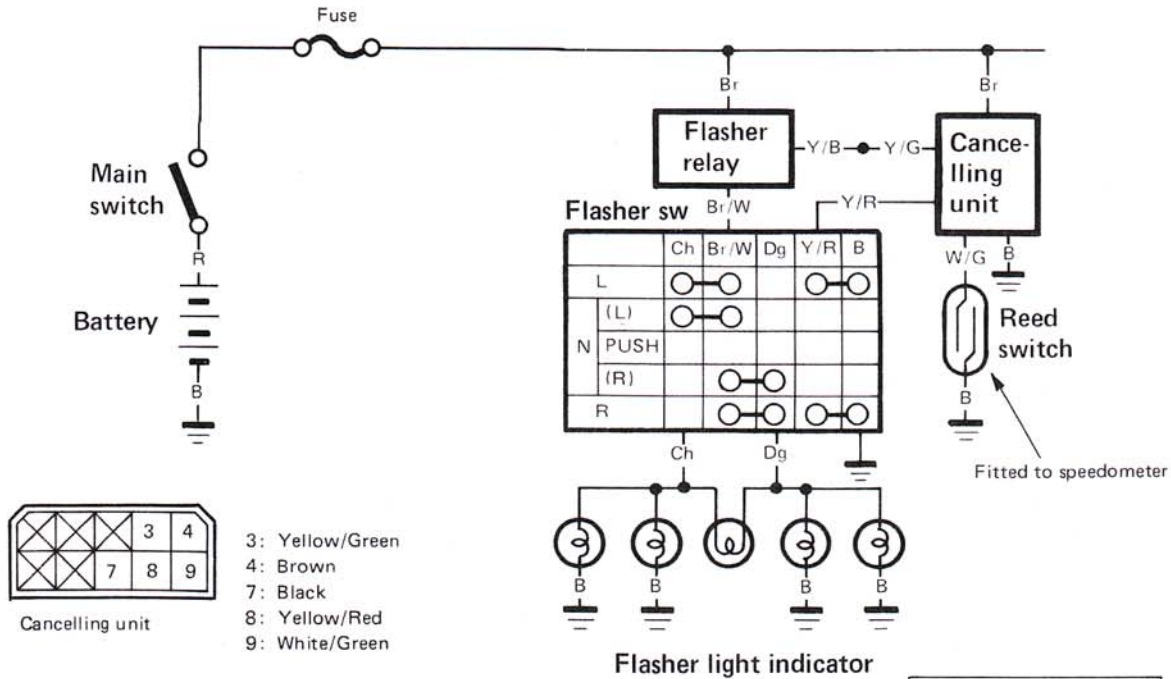




TROUBLESHOOTING

Cancelling unit does not work.




1. Disconnect the Y/B lead from the Y/G lead, connect it to the B lead.
2. Check the operation of flasher system.
3. If the flasher system works properly, cancelling system will be damaged.
4. Disconnect the 6-PIN connector from the cancelling unit, and connect the pocket tester across the W/G and B leads on wire harness side.

Turn the front wheel. If the tester needle swings back and forth between 0Ω to ∞ , the reed switch is in good condition. Replace the cancelling unit.



5. If the above test is not, the reed switch or W/G lead may be inoperative.

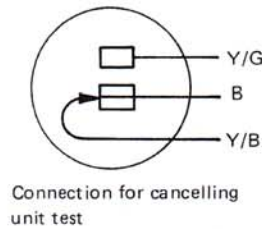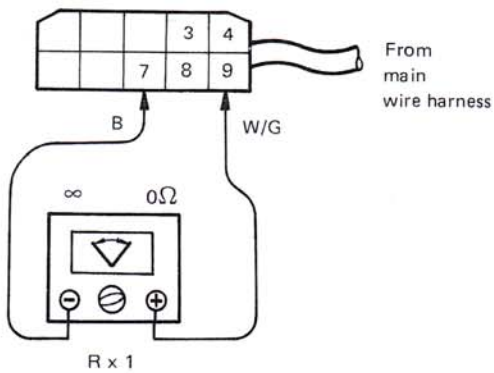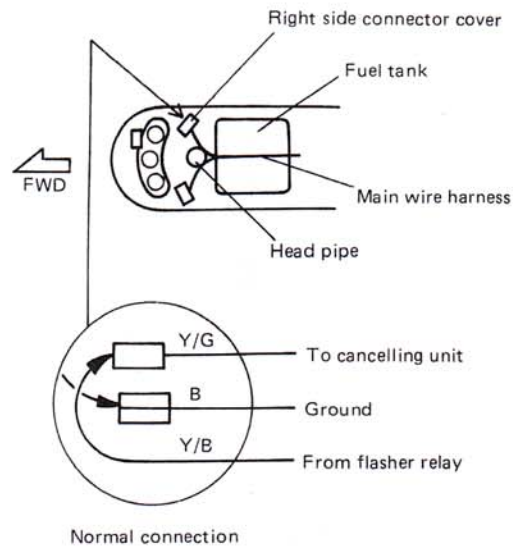

COOLING SYSTEM

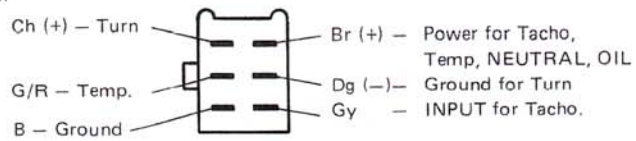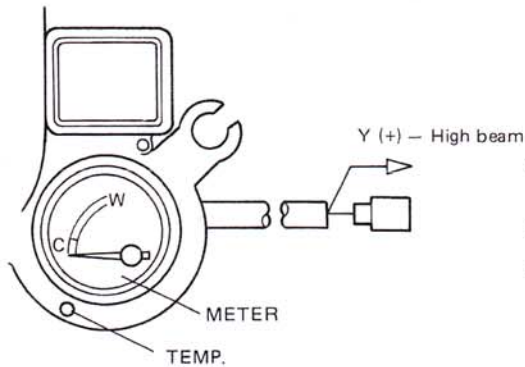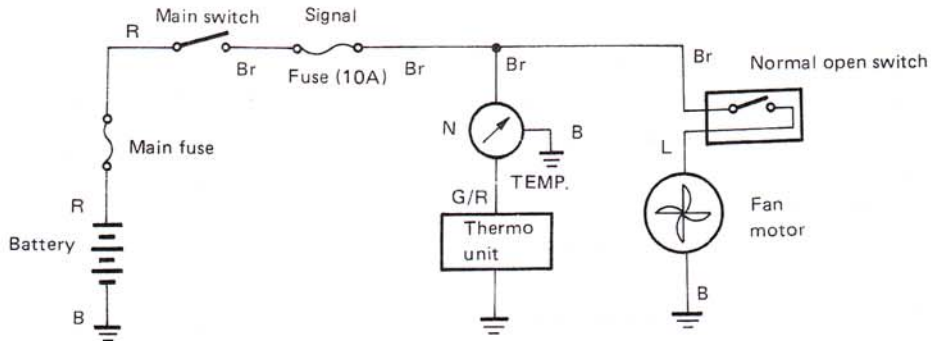

THERMOSTATIC SWITCH

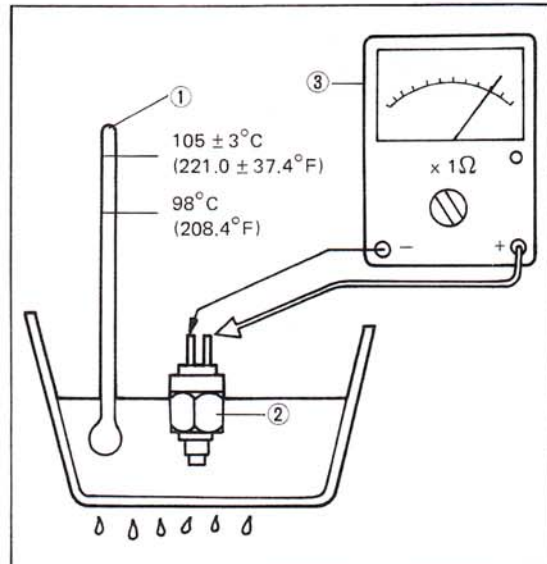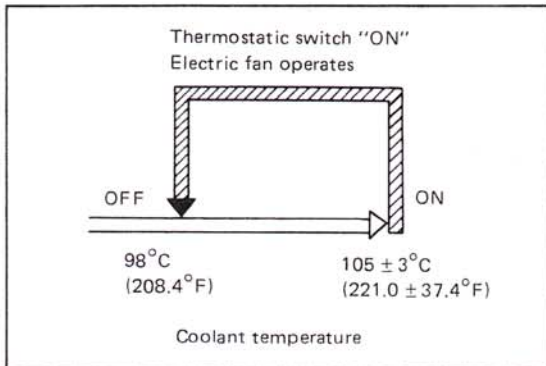


1. Temperature gauge
2. Thermostatic switch
3. Pocket tester

Test step	Water temperature	Pocket tester ($\Omega \times 1$)
1	0 ~ 98°C (32 ~ 208.4°F)	Discontinuity
2	more than 105 ± 3°C (more than 221.0 ± 37.4°F)	Continuity
3*	105 to 98°C (221 to 208.4°F)	Continuity
4*	less than 98°C (less than 208.4°F)	Discontinuity

Test 1 & 2: Heat-up tests

Test 3* & 4*: Cool-down tests


ELECTRIC FAN

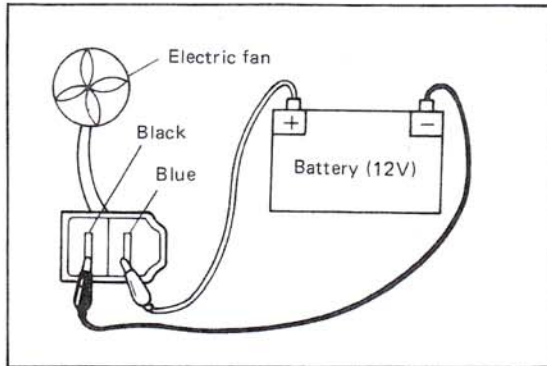

If the electric fan operates, it is in good condition:


THERMO-UNIT

Water temperature	60°C	80°C	115°C
Resistance	107Ω	52Ω	18Ω

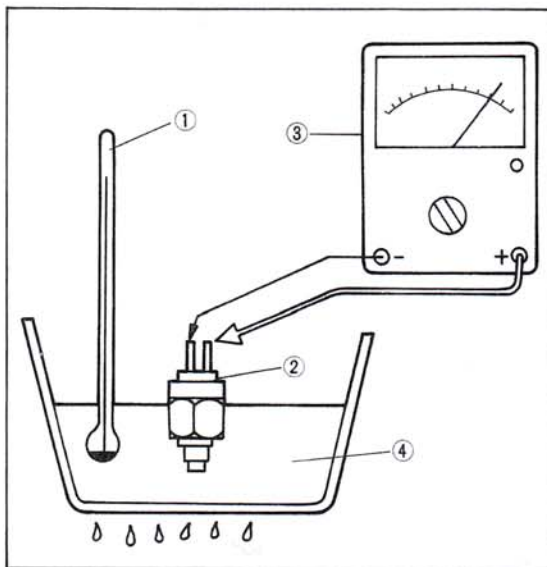

1. Temperature gauge
2. Thermo-unit
3. Pocket tester
4. Water

TEMP. METER

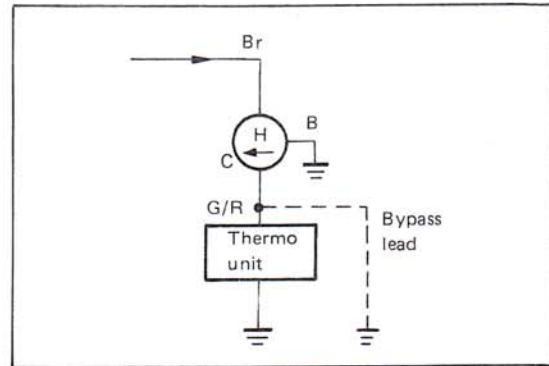

1. Main switch in ON.
2. Disconnect Green/Red lead → Swings to C
Ground Green/Red lead → Swing to H

HEADLIGHT

